


ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

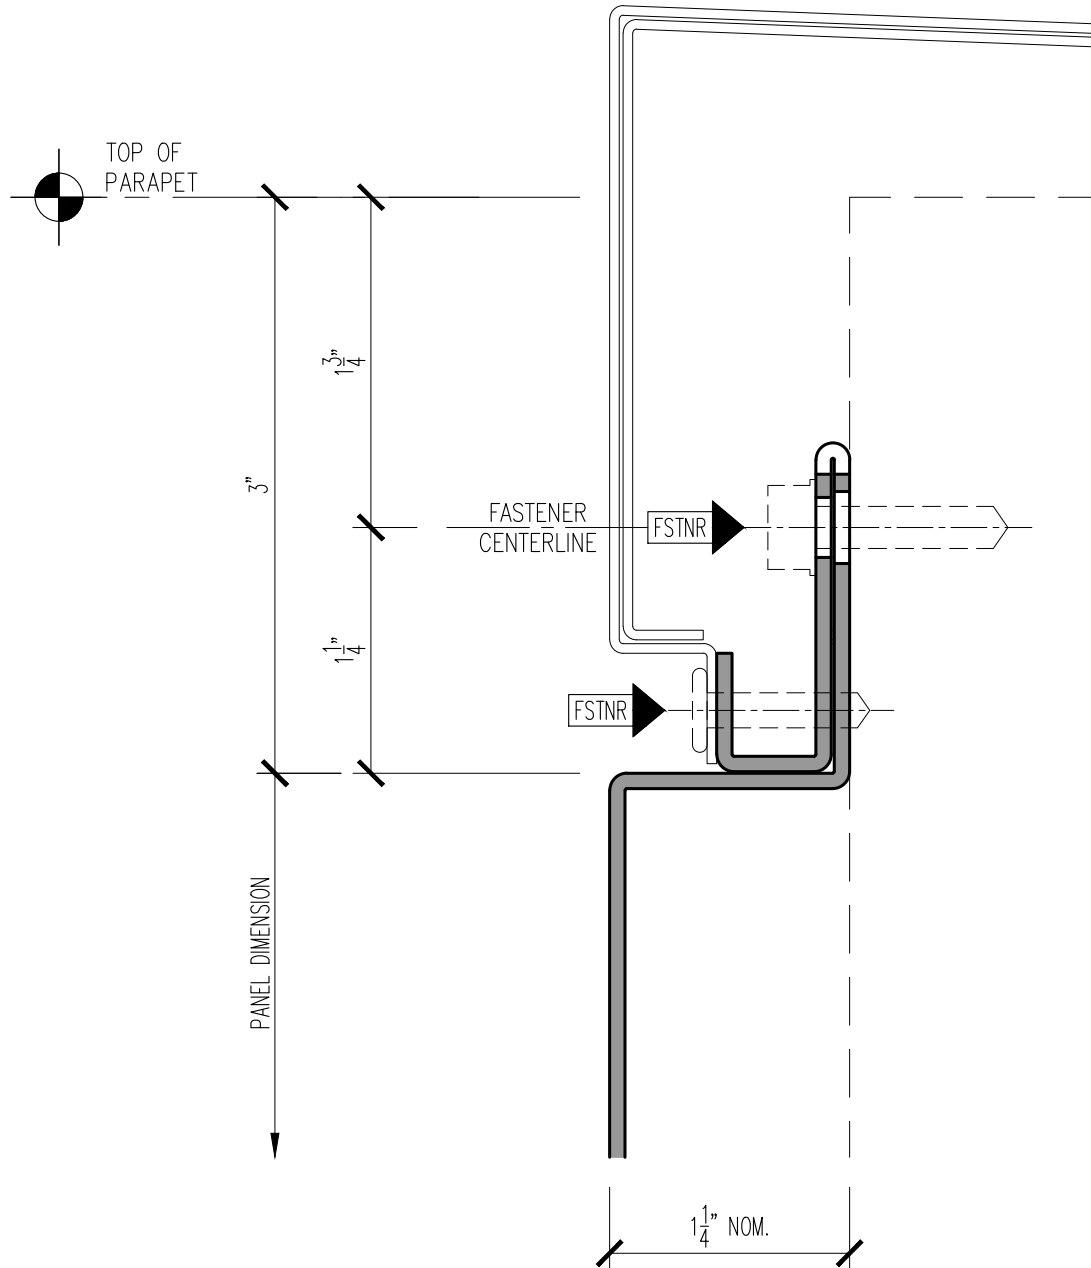

1

PANEL TERMINATION AT COPING

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D01

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

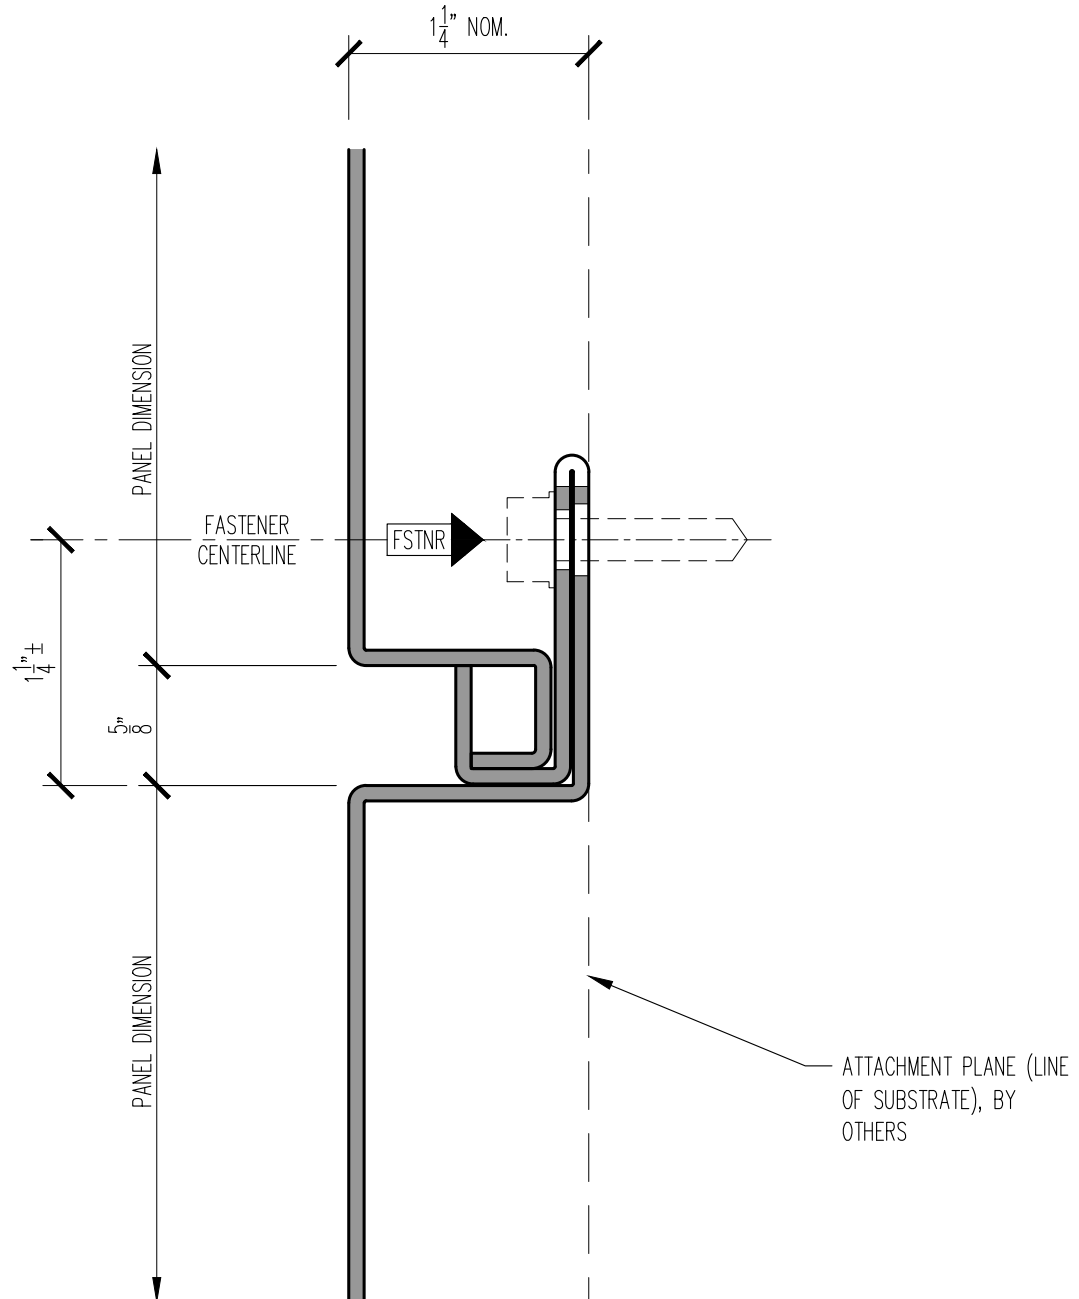

2

PANEL HORIZONTAL JOINT

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D02

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

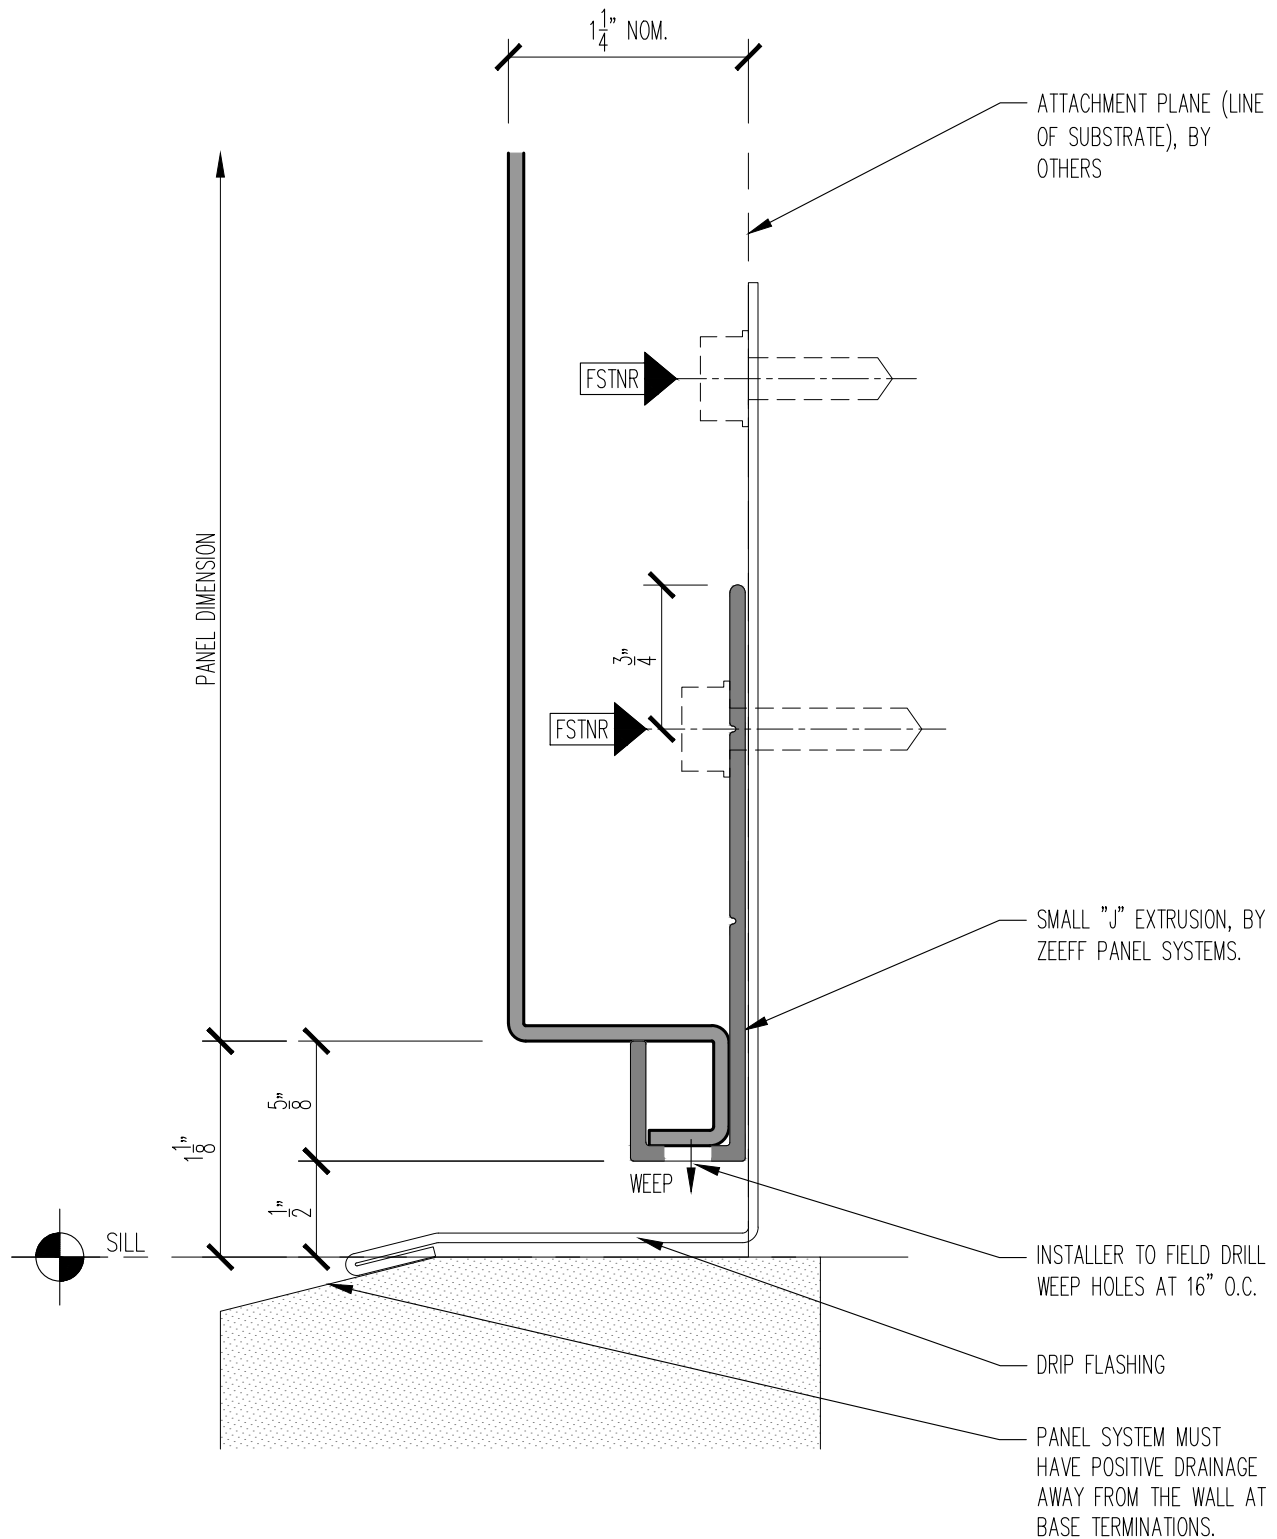

3

PANEL BASE TERMINATION

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D03

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

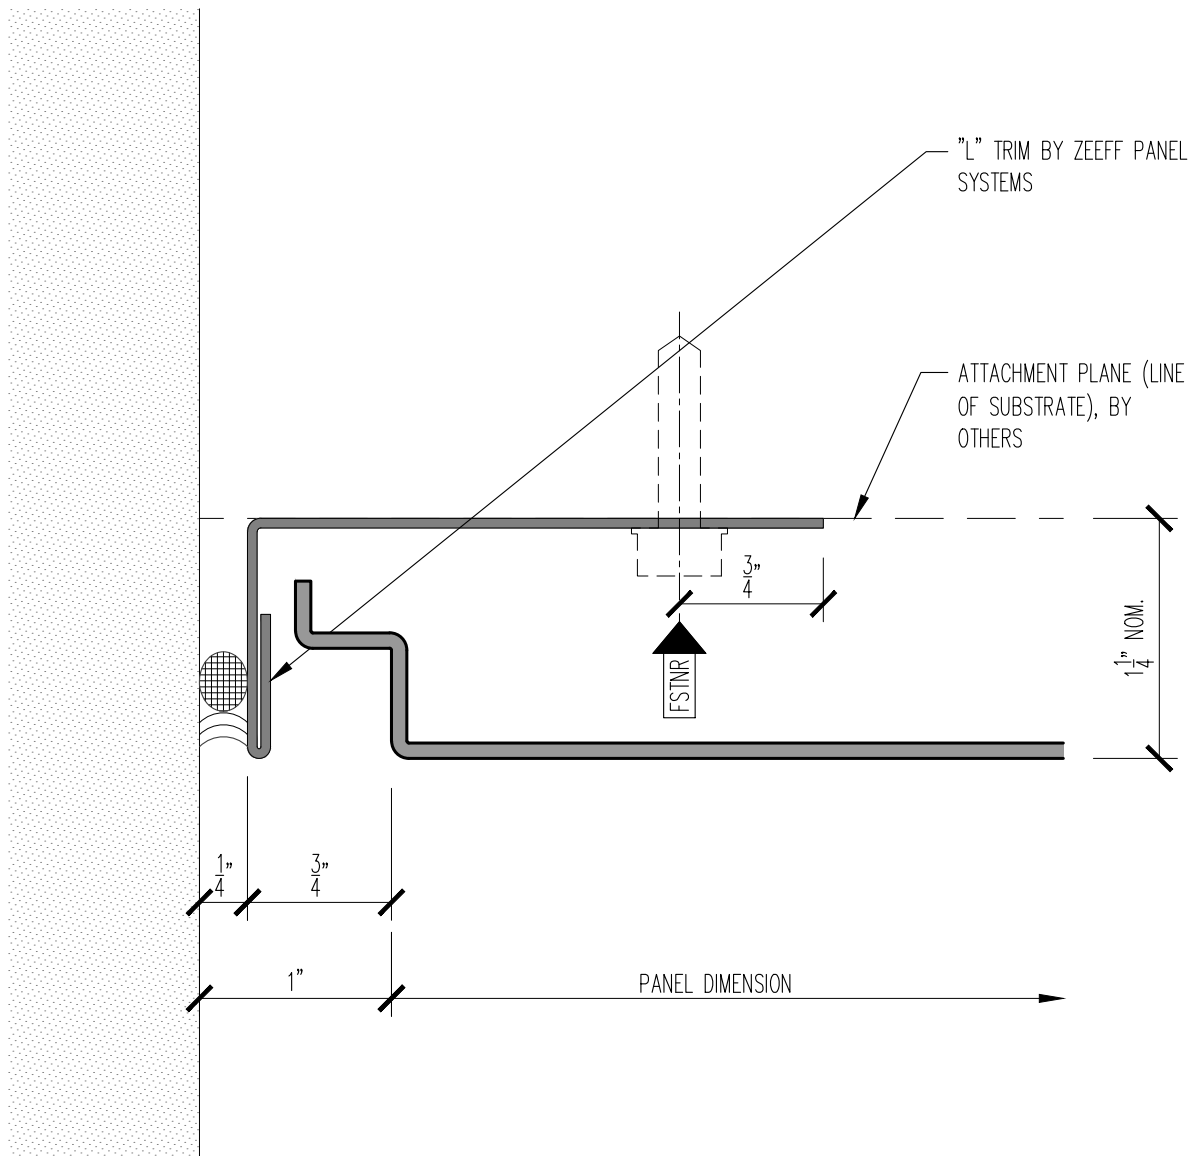

PANEL JAMB TERMINATION



SCALE: FULL

INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D04

ORIGIN SERIES DESIGN GUIDE
ARCHITECTURAL INSTALLATION

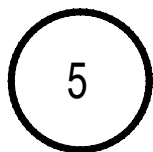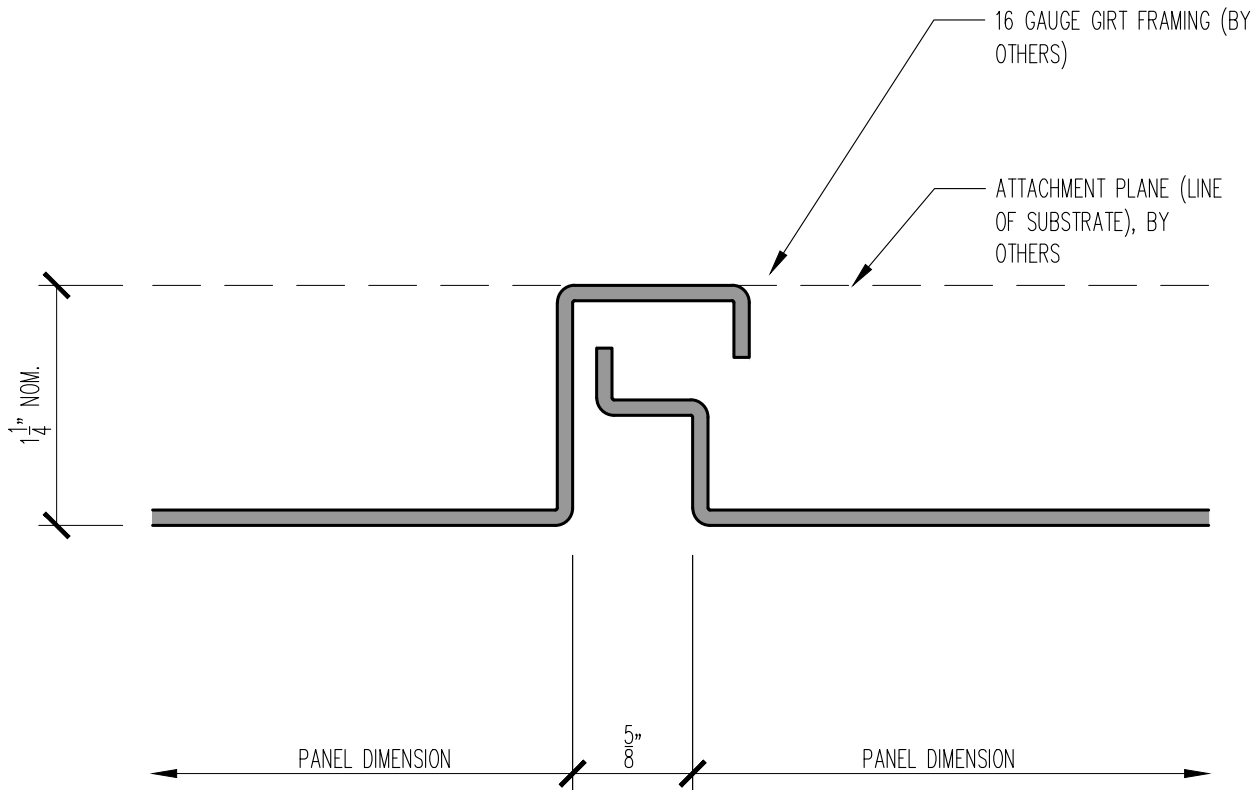

PANEL VERTICAL JOINT

SCALE: FULL



INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D05

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

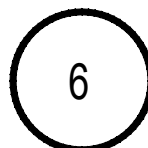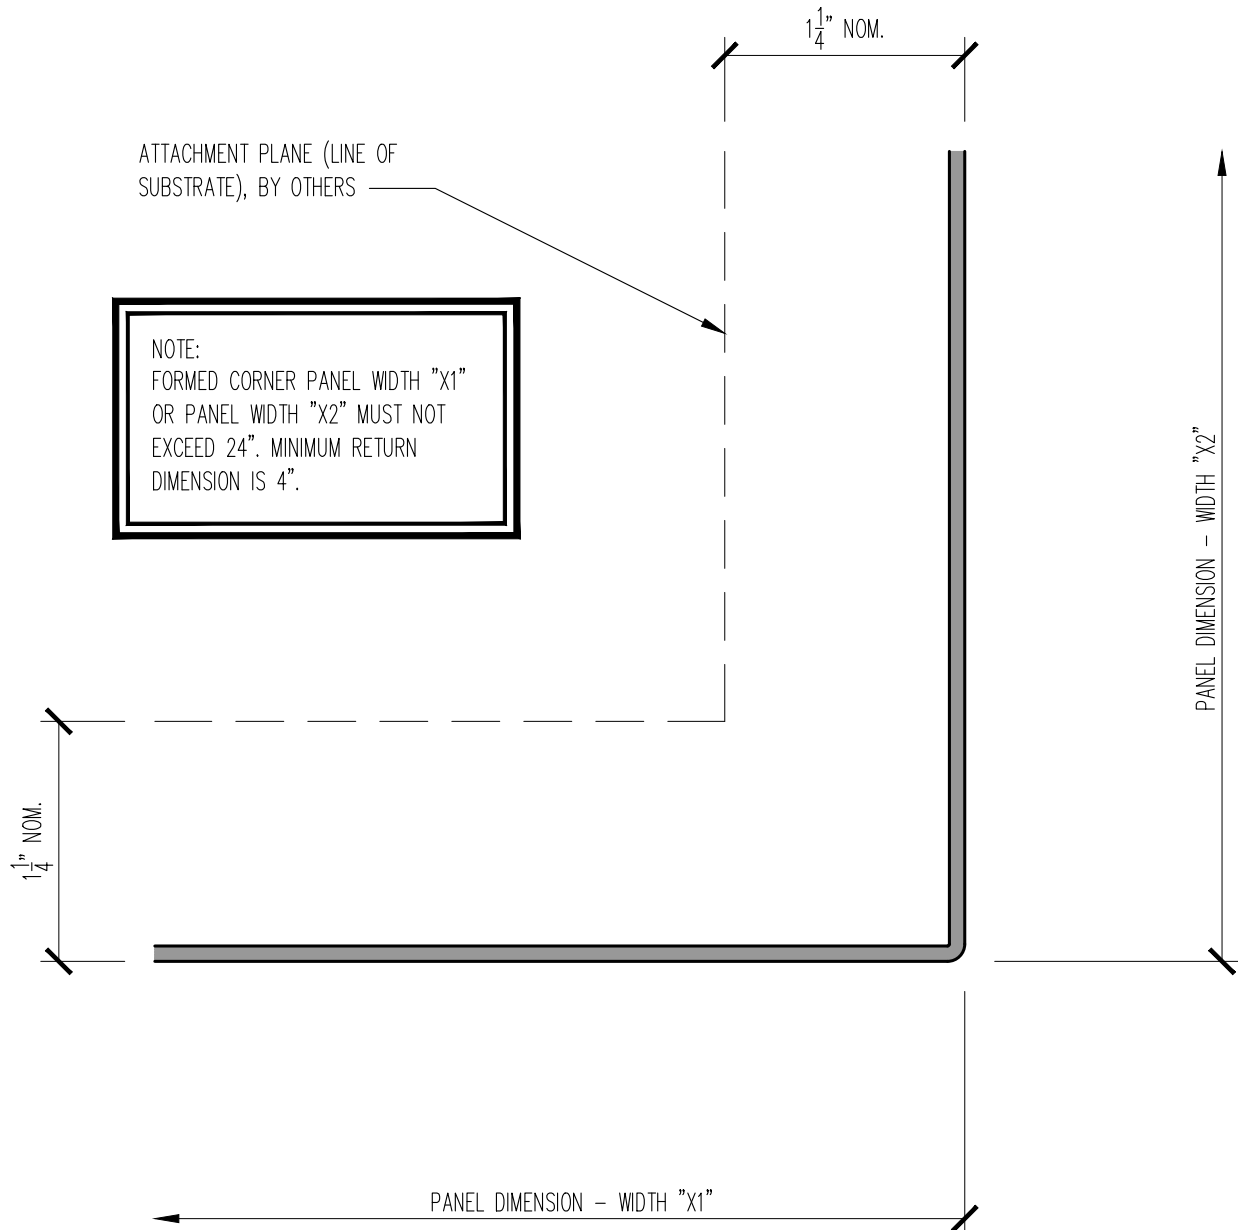

90° FORMED OUTSIDE CORNER DETAIL

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D06

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

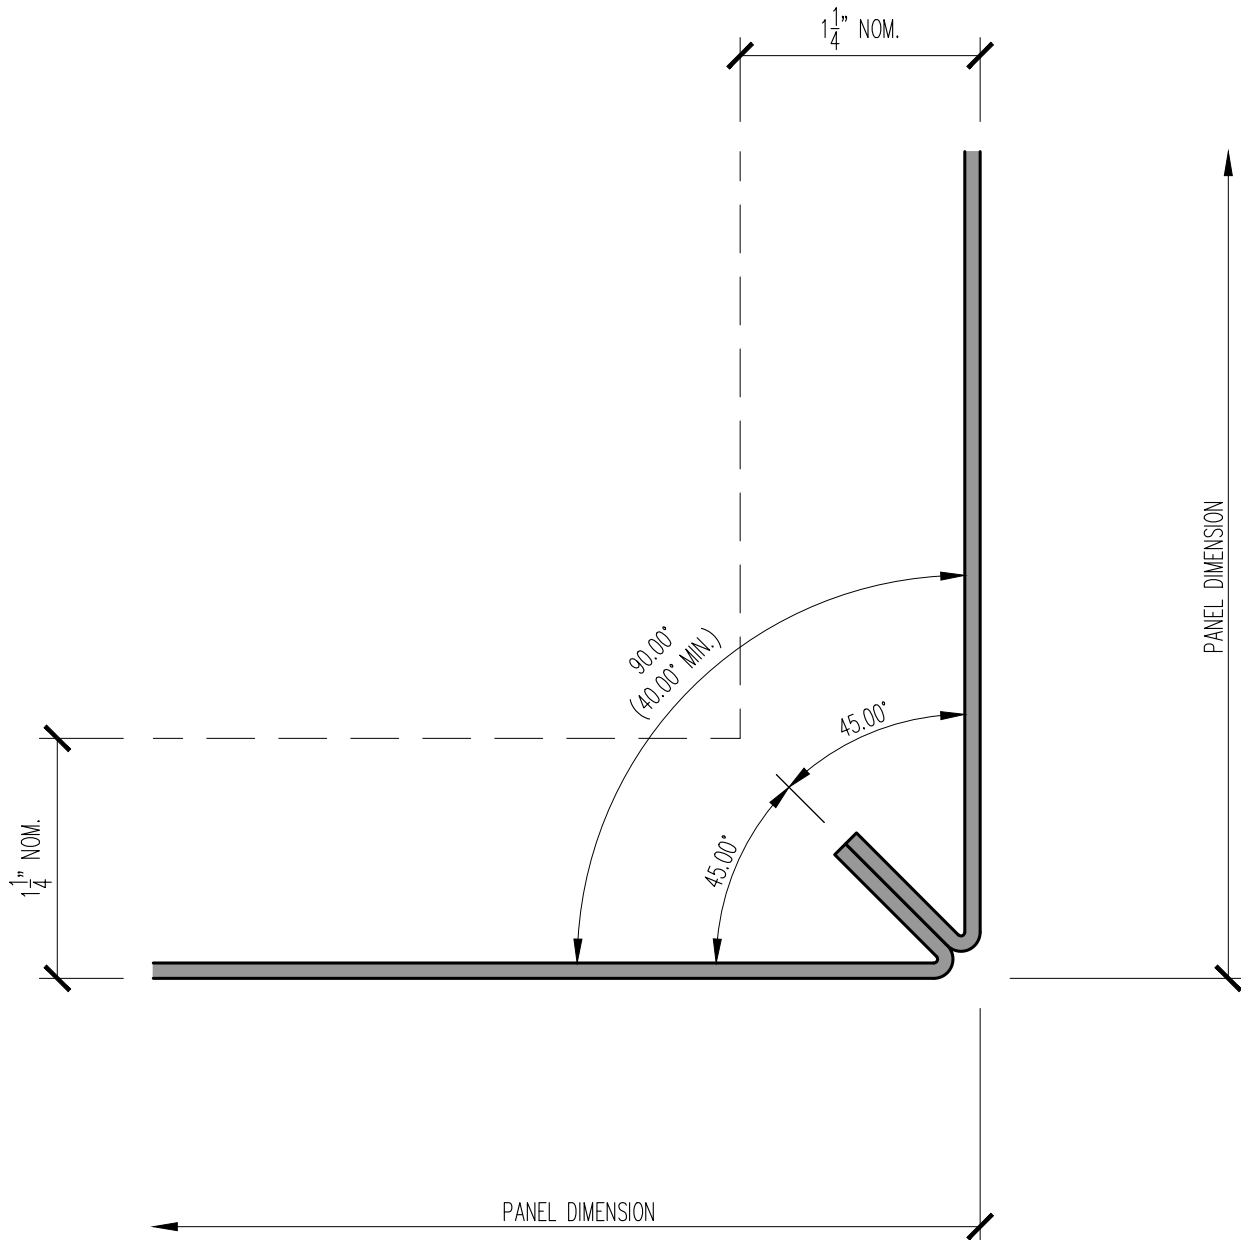

6A

90° KNIFE EDGE CORNER DETAIL

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D07

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

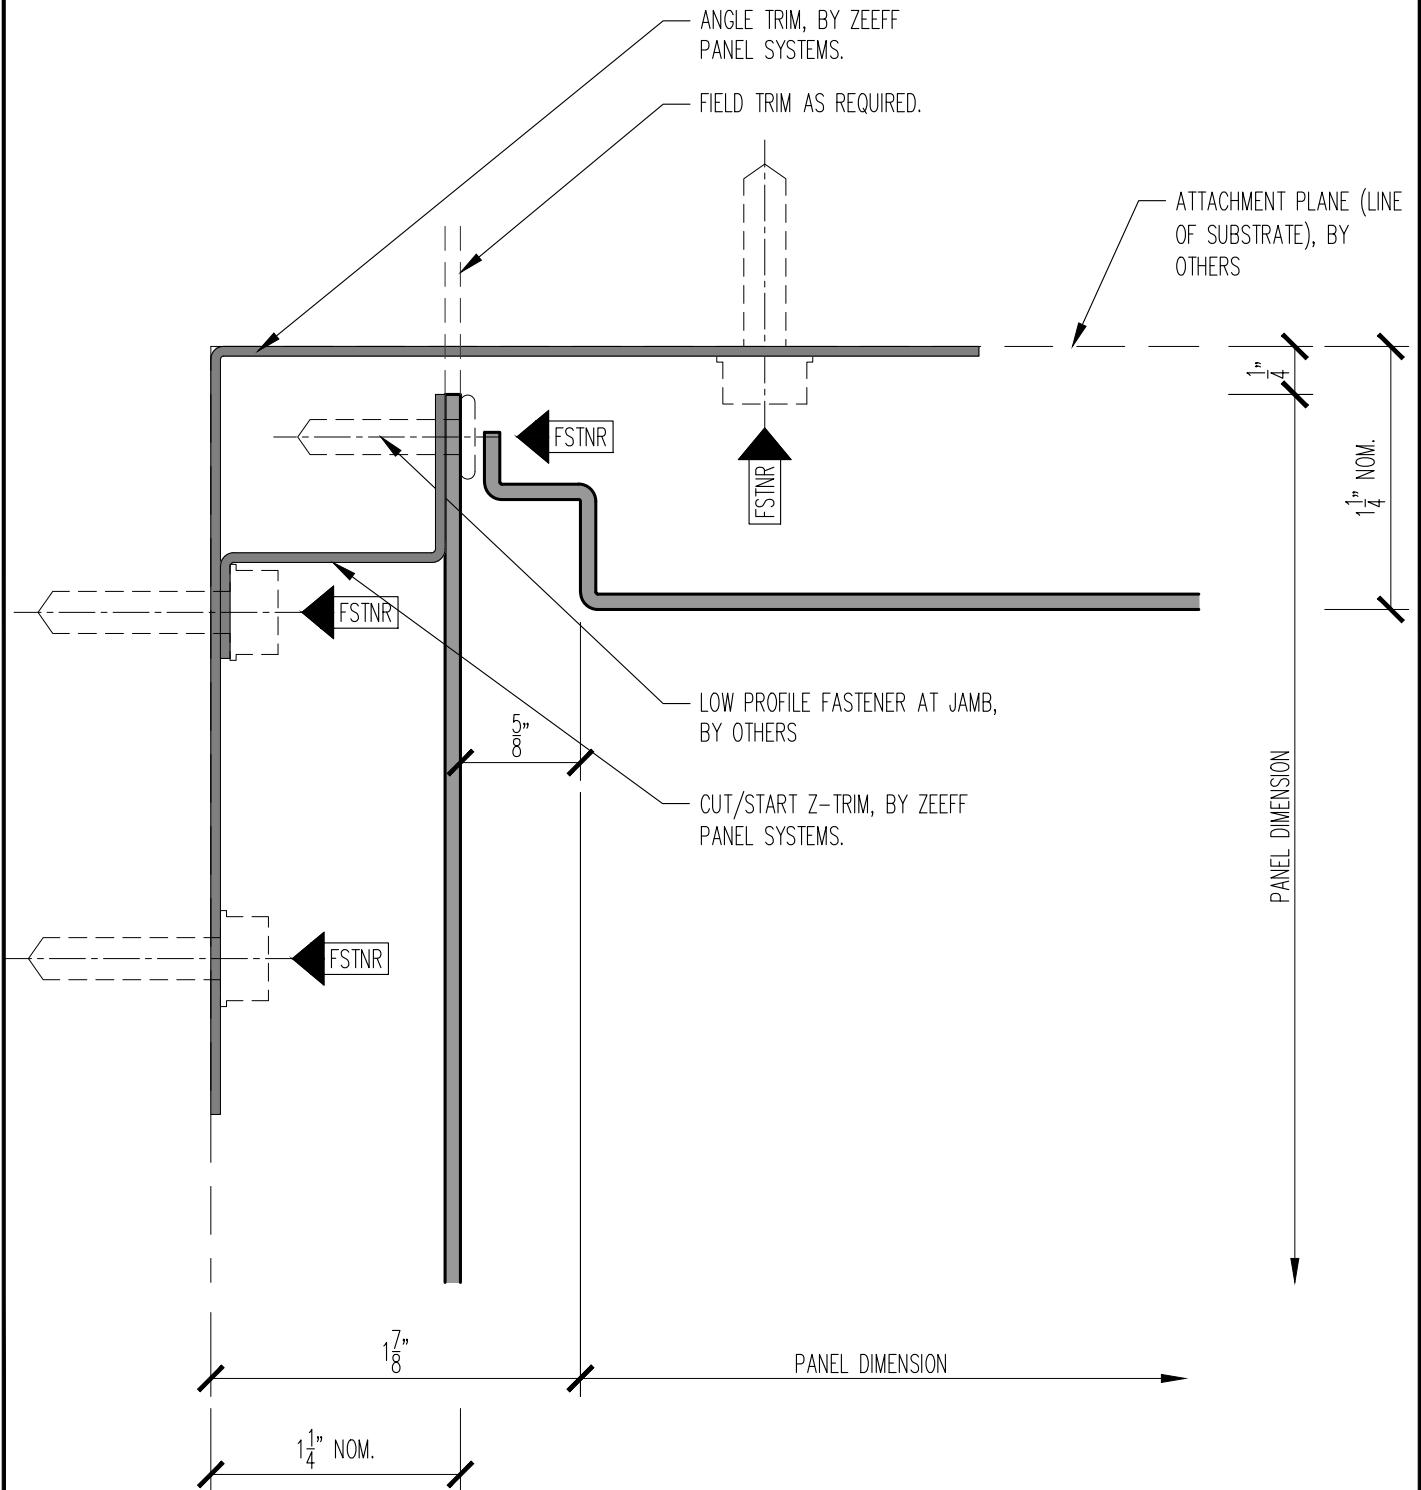

7

90° INSIDE CORNER DETAIL

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D08

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

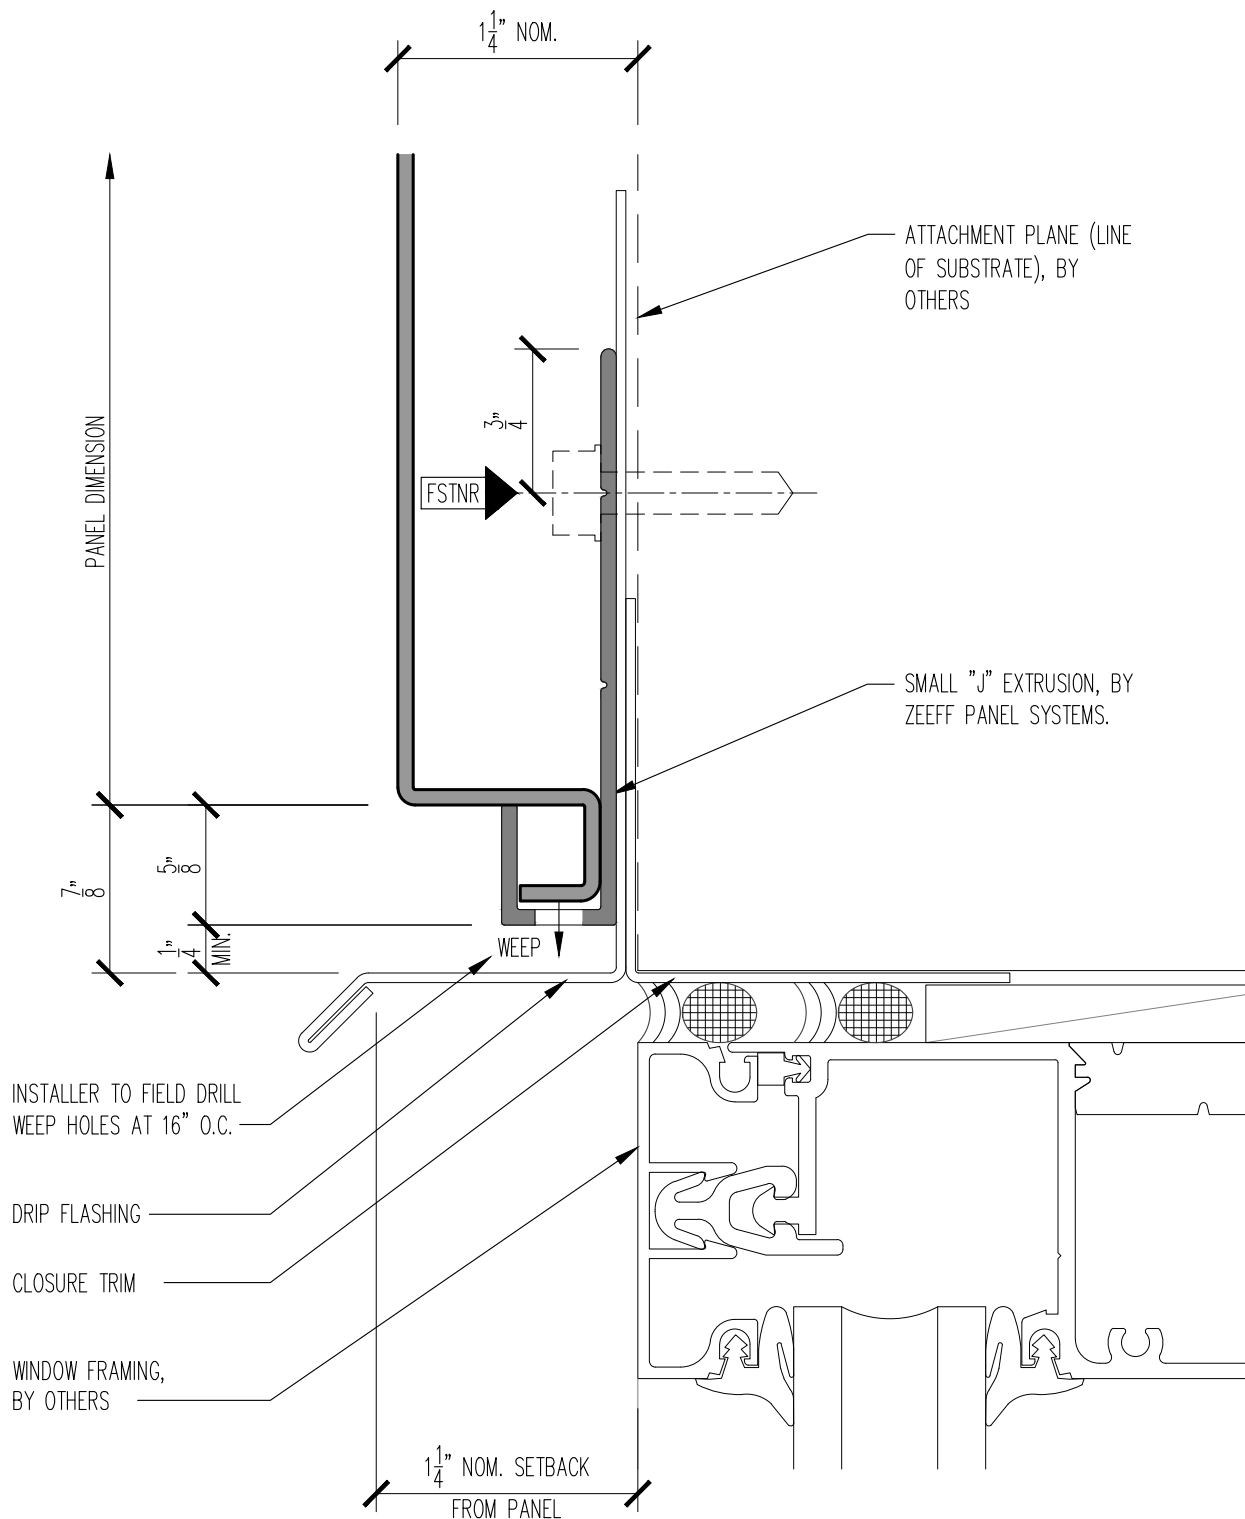

8

PANEL BASE DETAIL AT WINDOW / DOOR HEAD



SCALE: FULL

INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D09

ORIGIN SERIES DESIGN GUIDE ARCHITECTURAL INSTALLATION

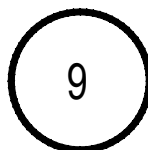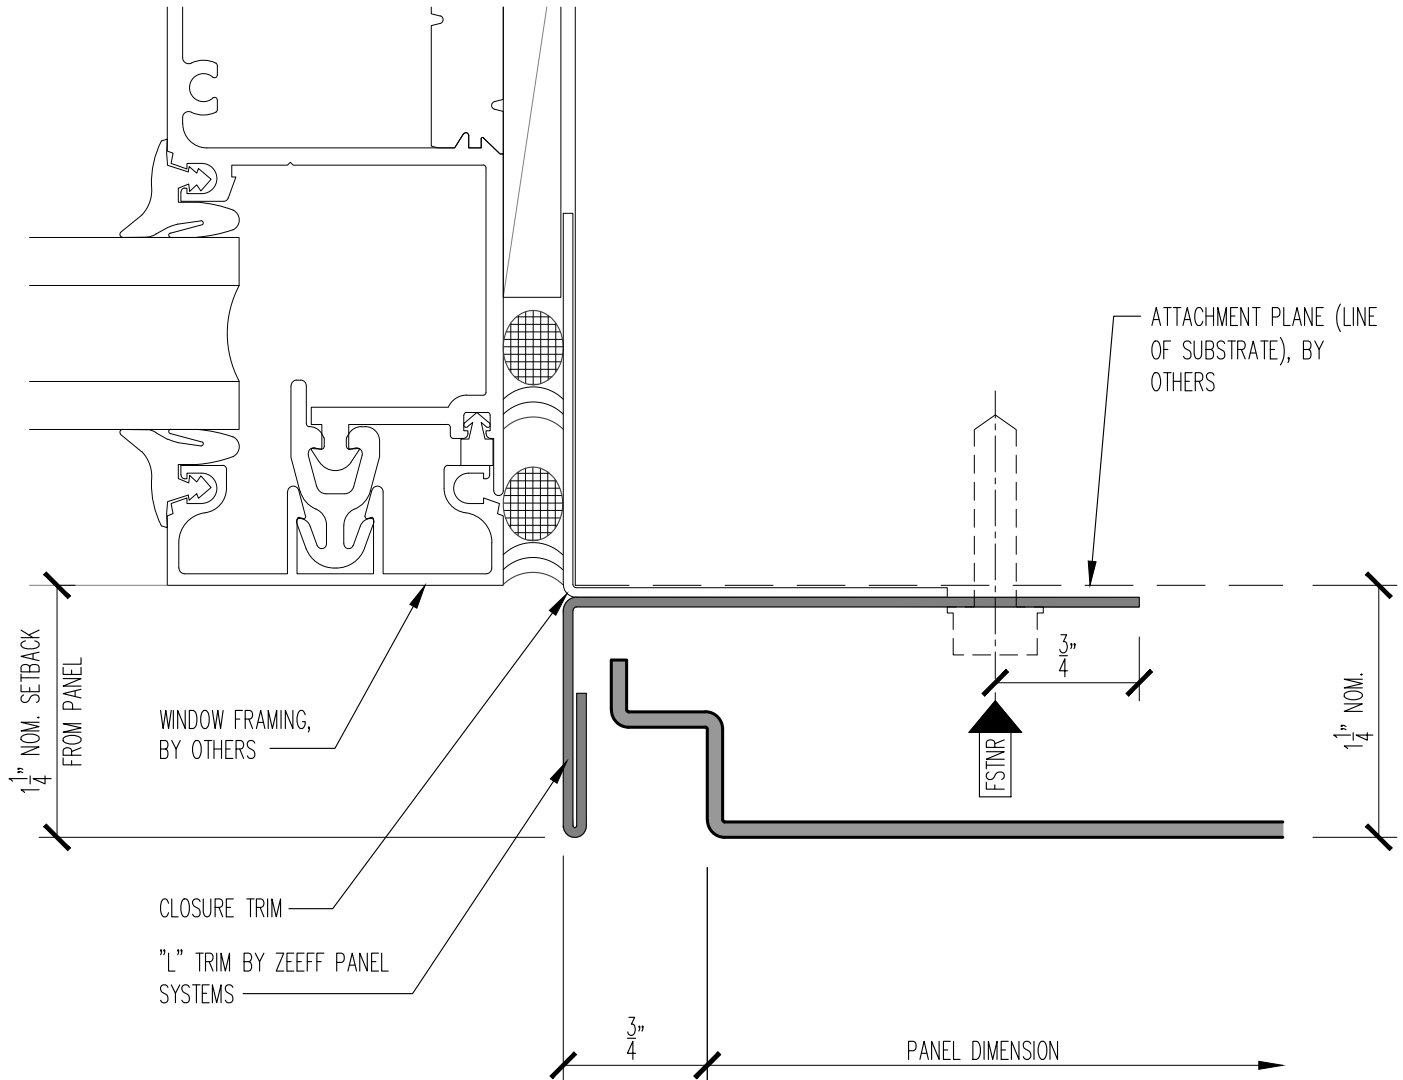

PANEL JAMB DETAIL AT WINDOW / DOOR JAMB

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D10

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

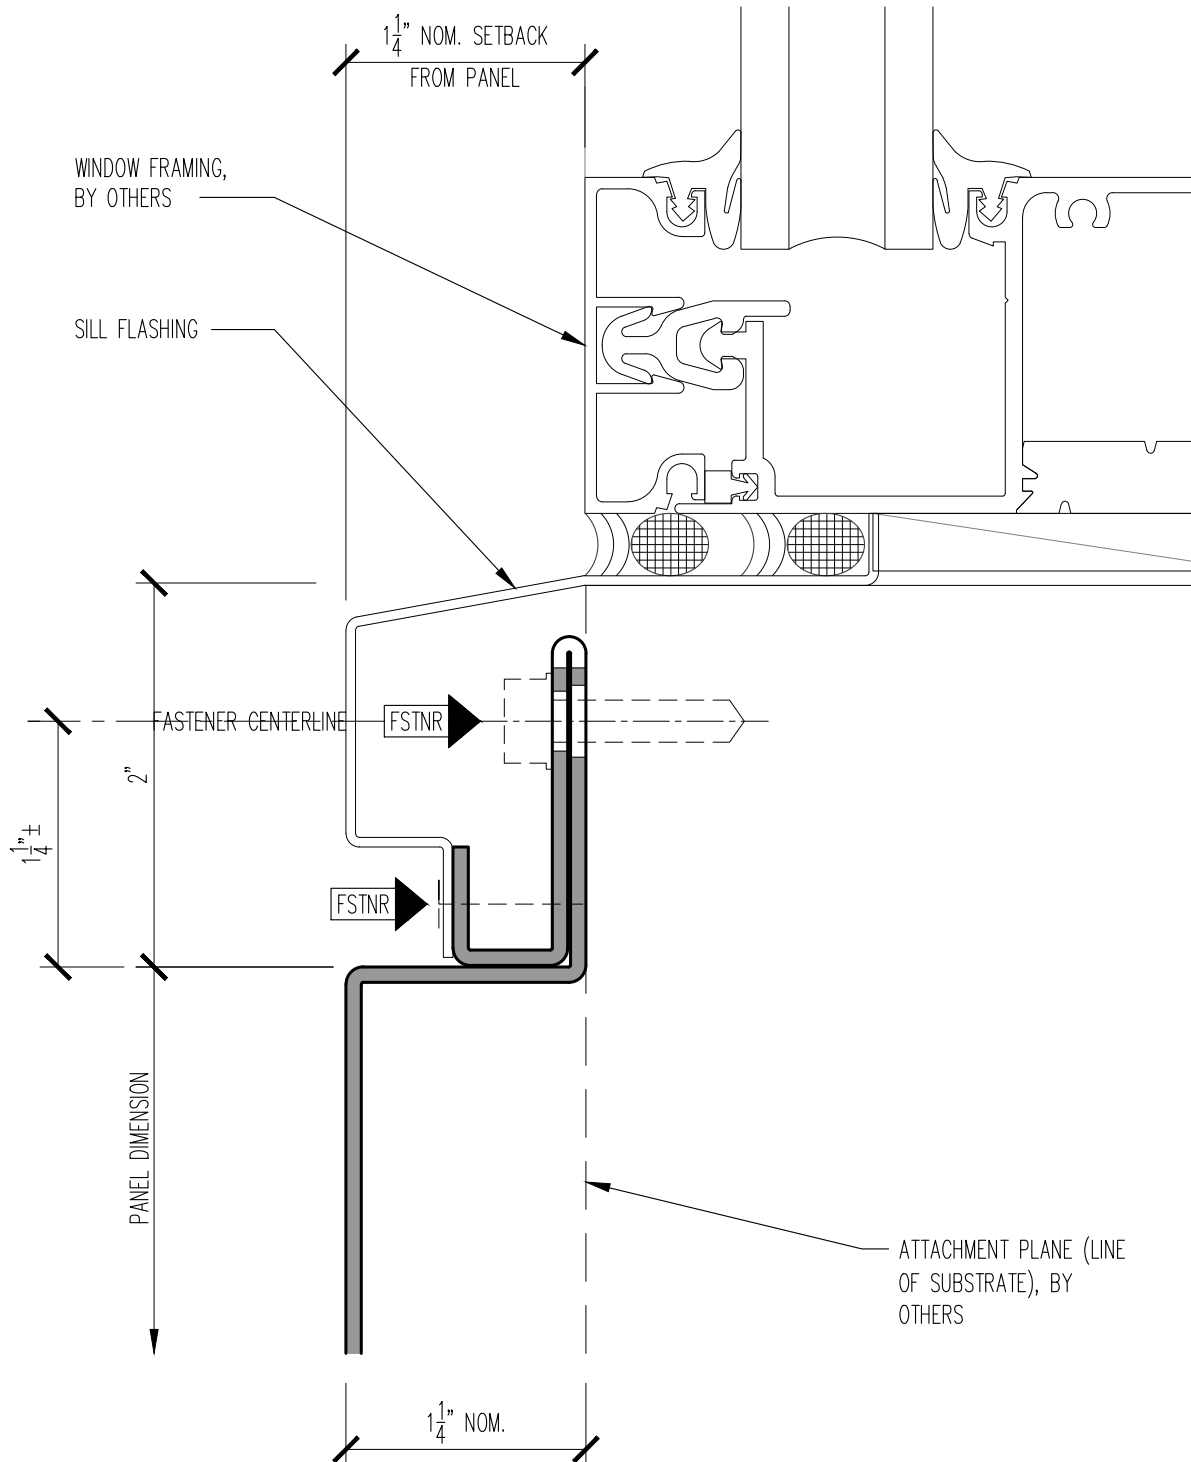

10

PANEL HEAD DETAIL AT WINDOW SILL

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D11

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

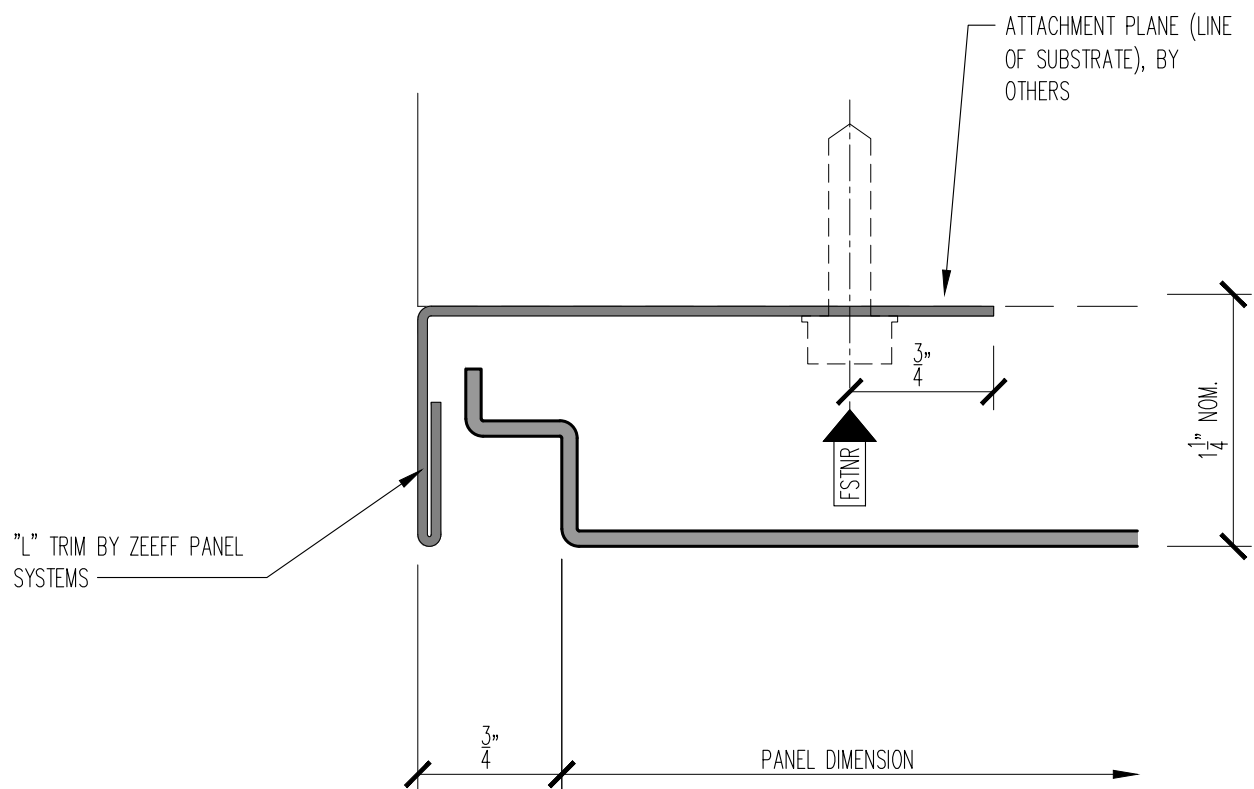

11

PANEL JAMB TERMINATION AT END WALL

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D12

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

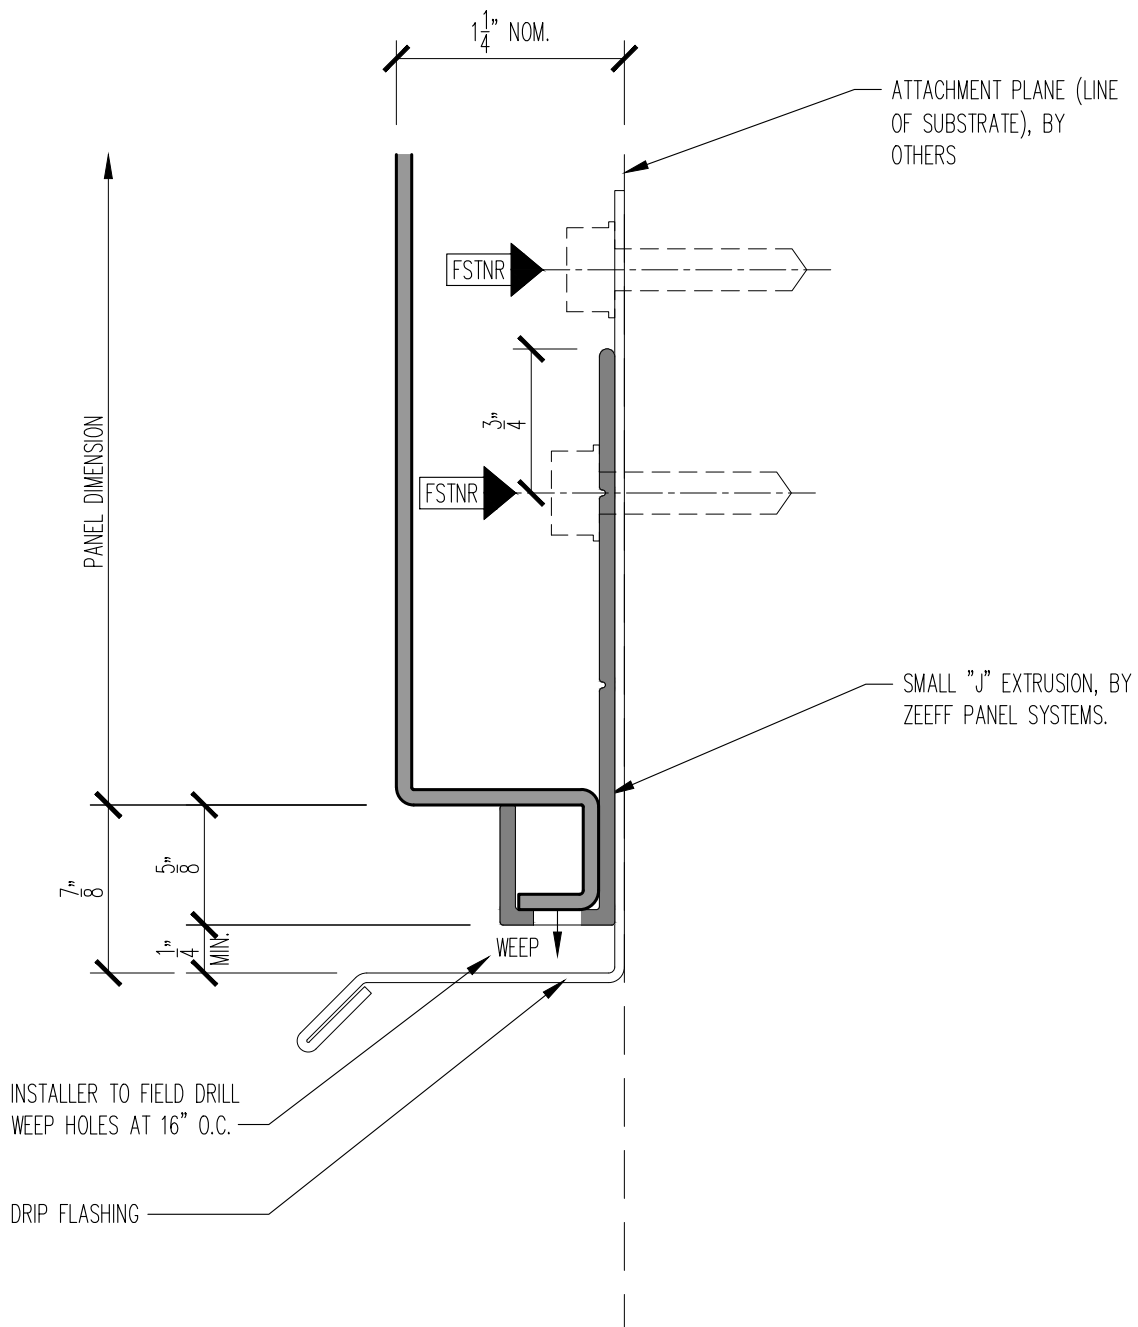

12

PANEL BASE TERMINATION OVER ROOF

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D13

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

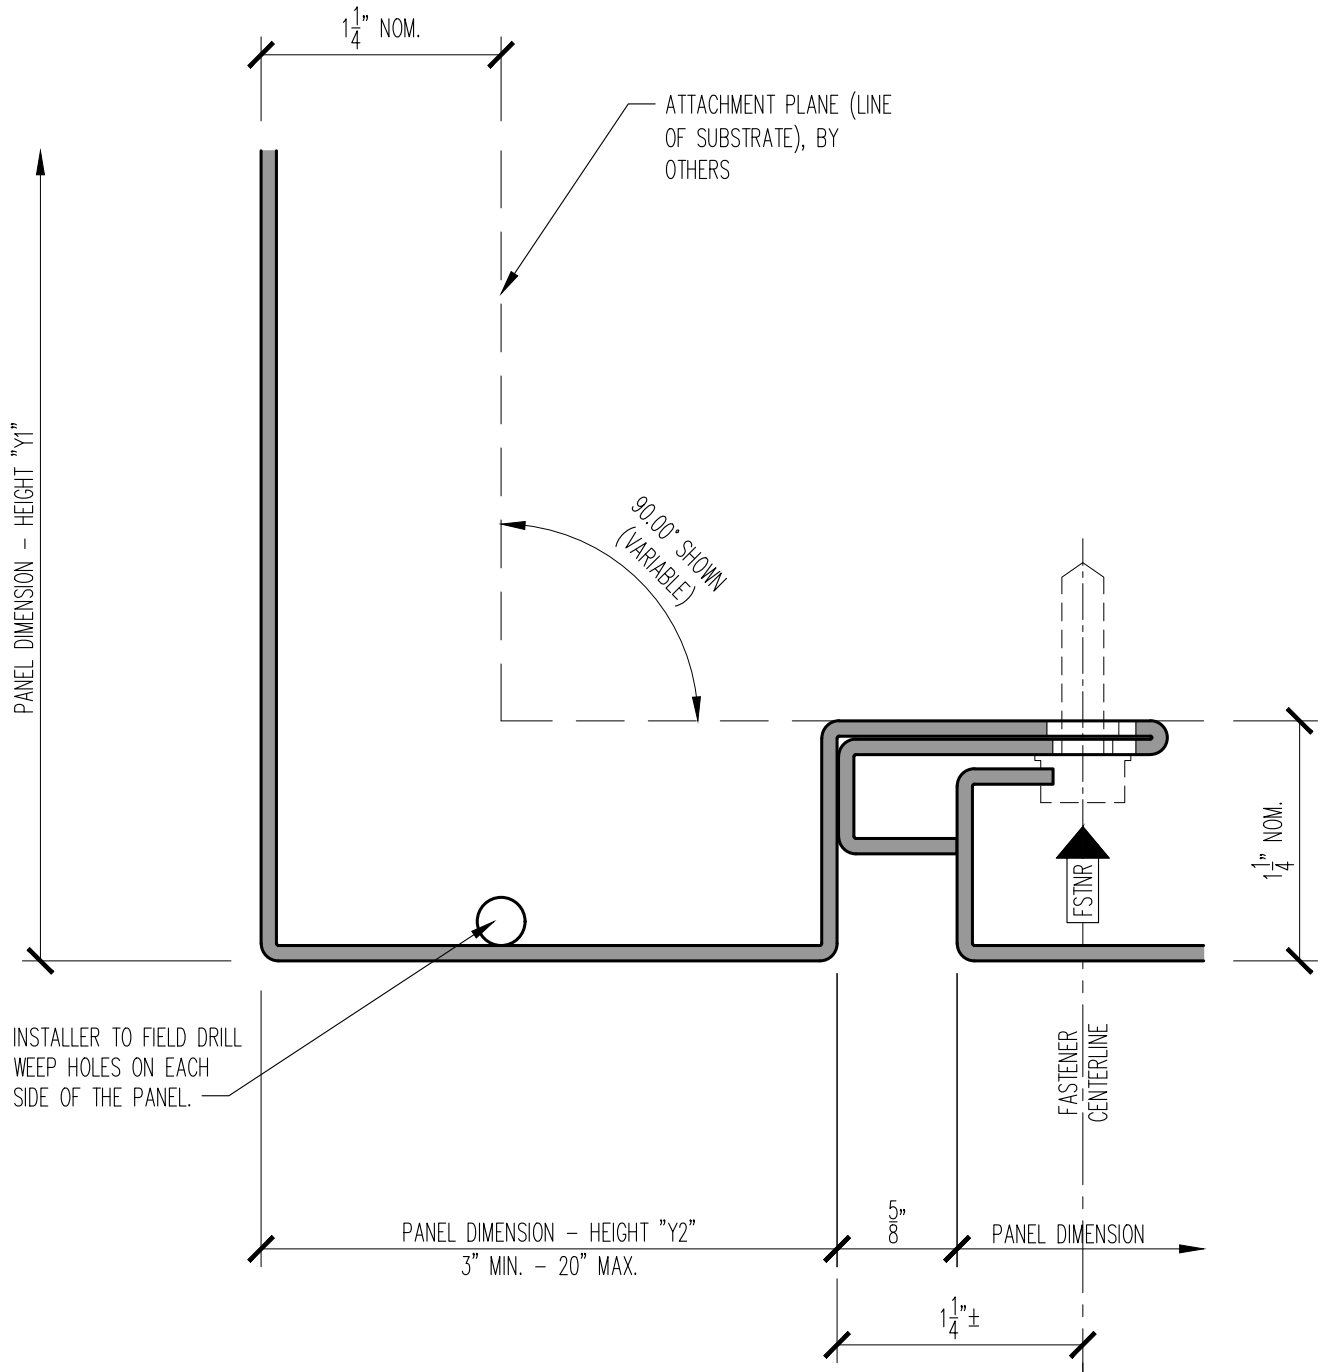

13

FASCIA TO SOFFIT (SIDE) TRANSITION

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D14

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

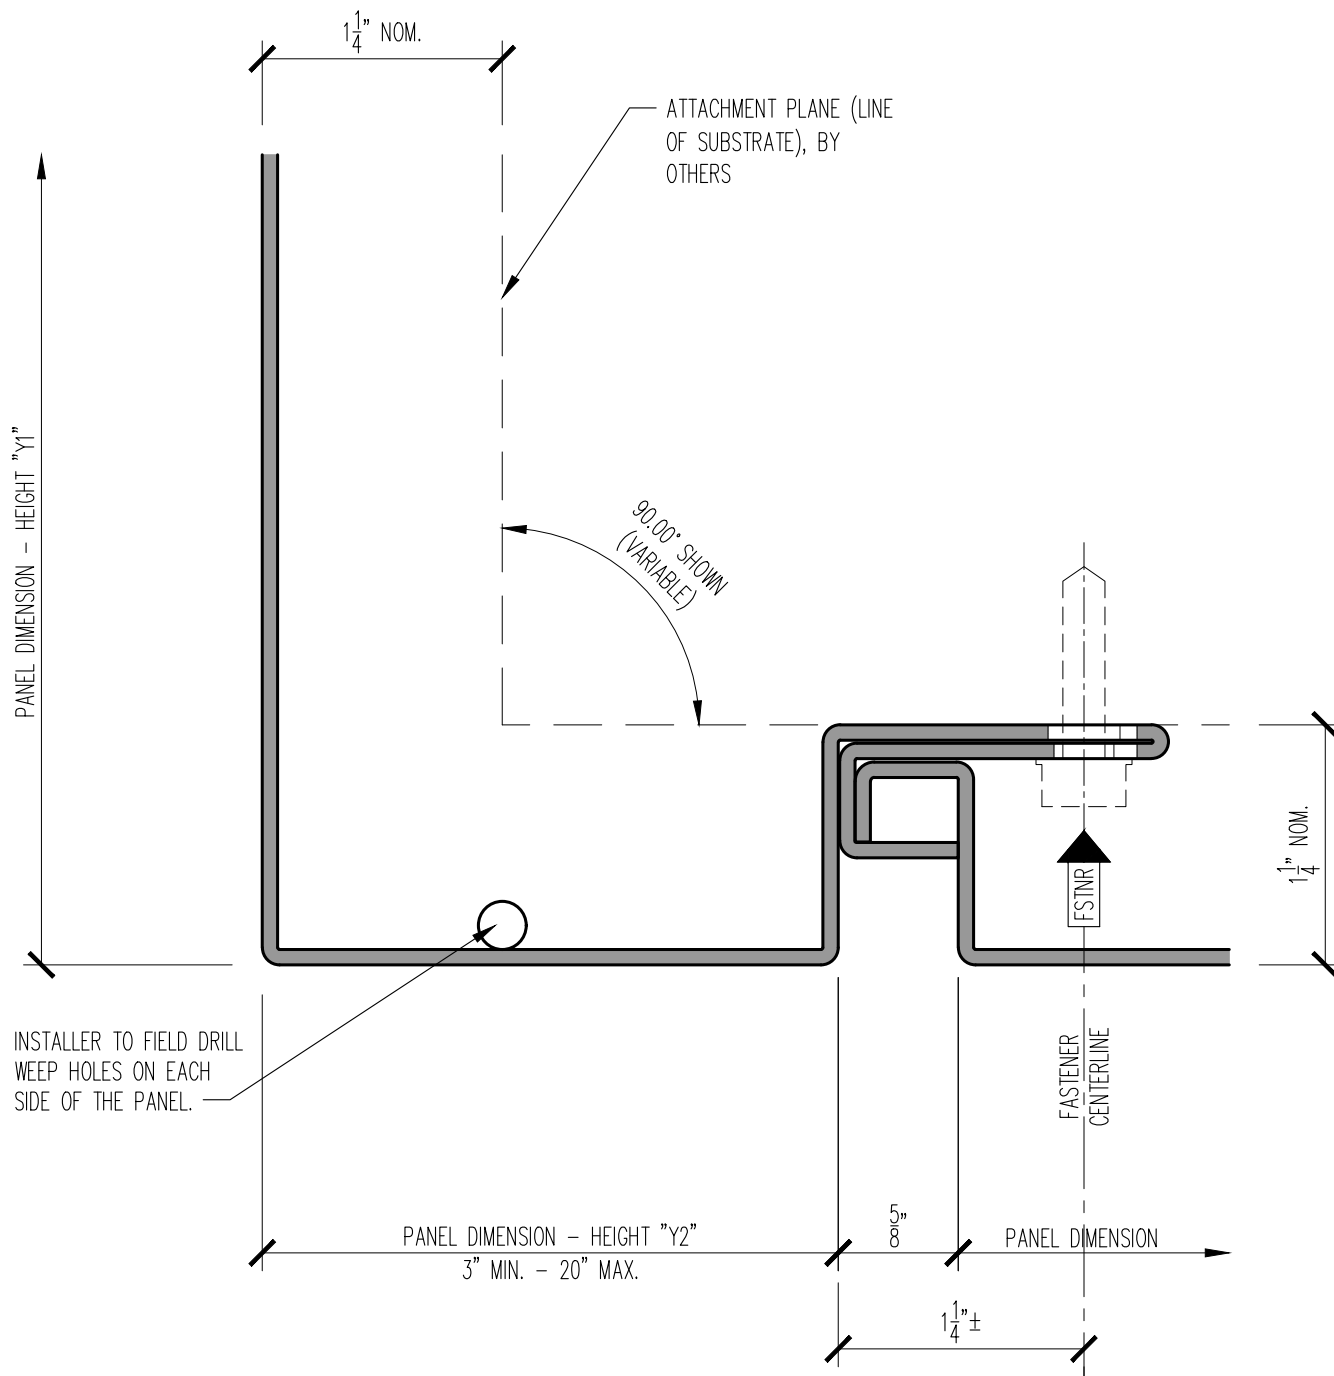

13A

FASCIA TO SOFFIT (ENGAGED) TRANSITION

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D15

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

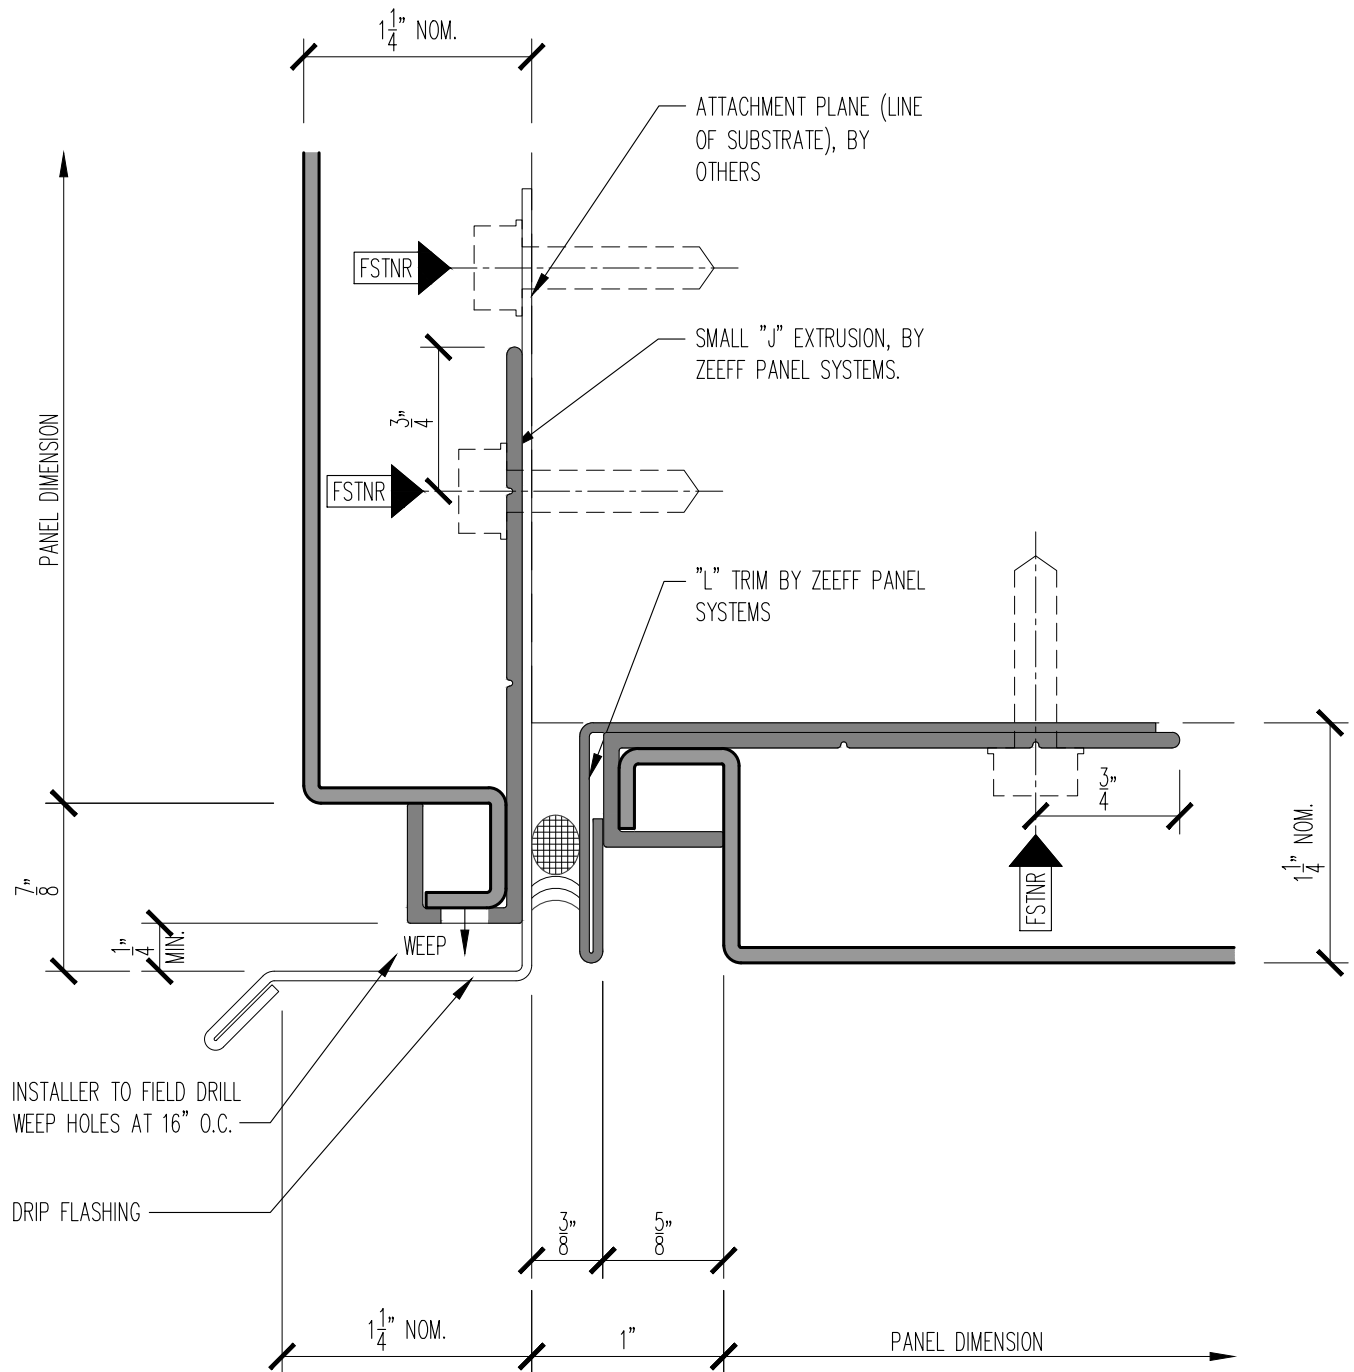

13A

FASCIA TO SOFFIT (TRIM) TRANSITION

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D16

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

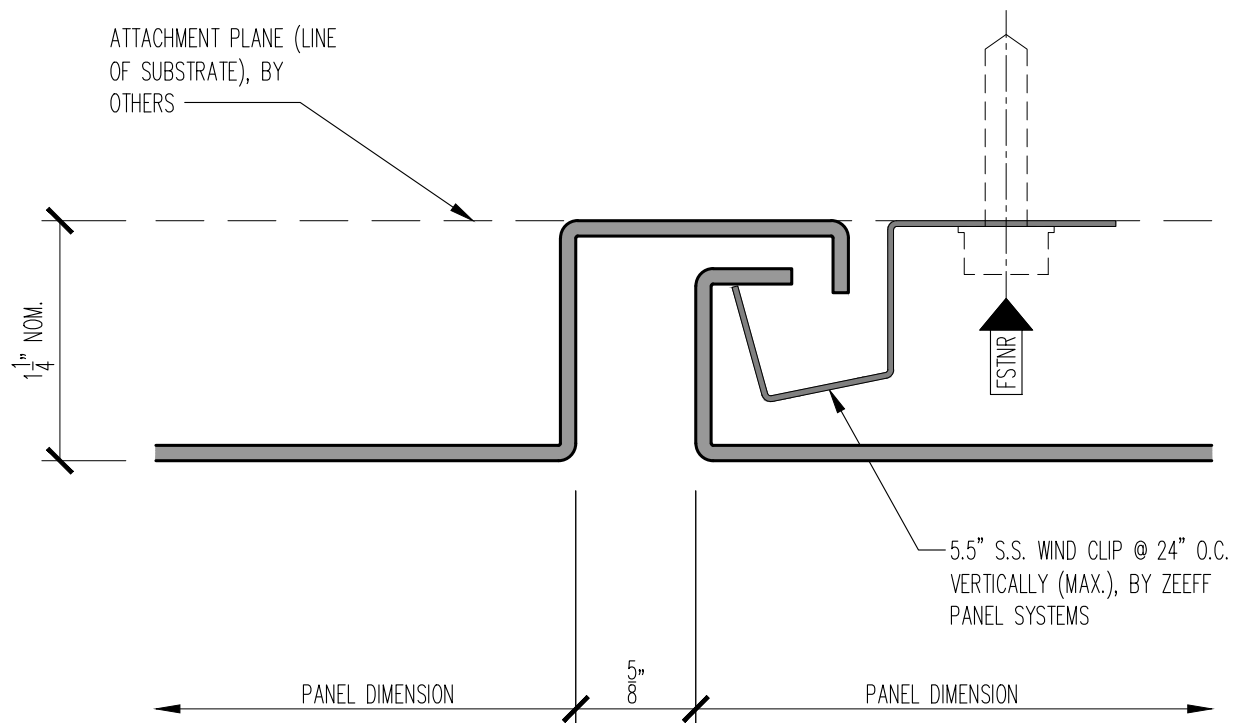

14

PANEL VERTICAL JOINT FOR PANELS OVER 48" TALL

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D17

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

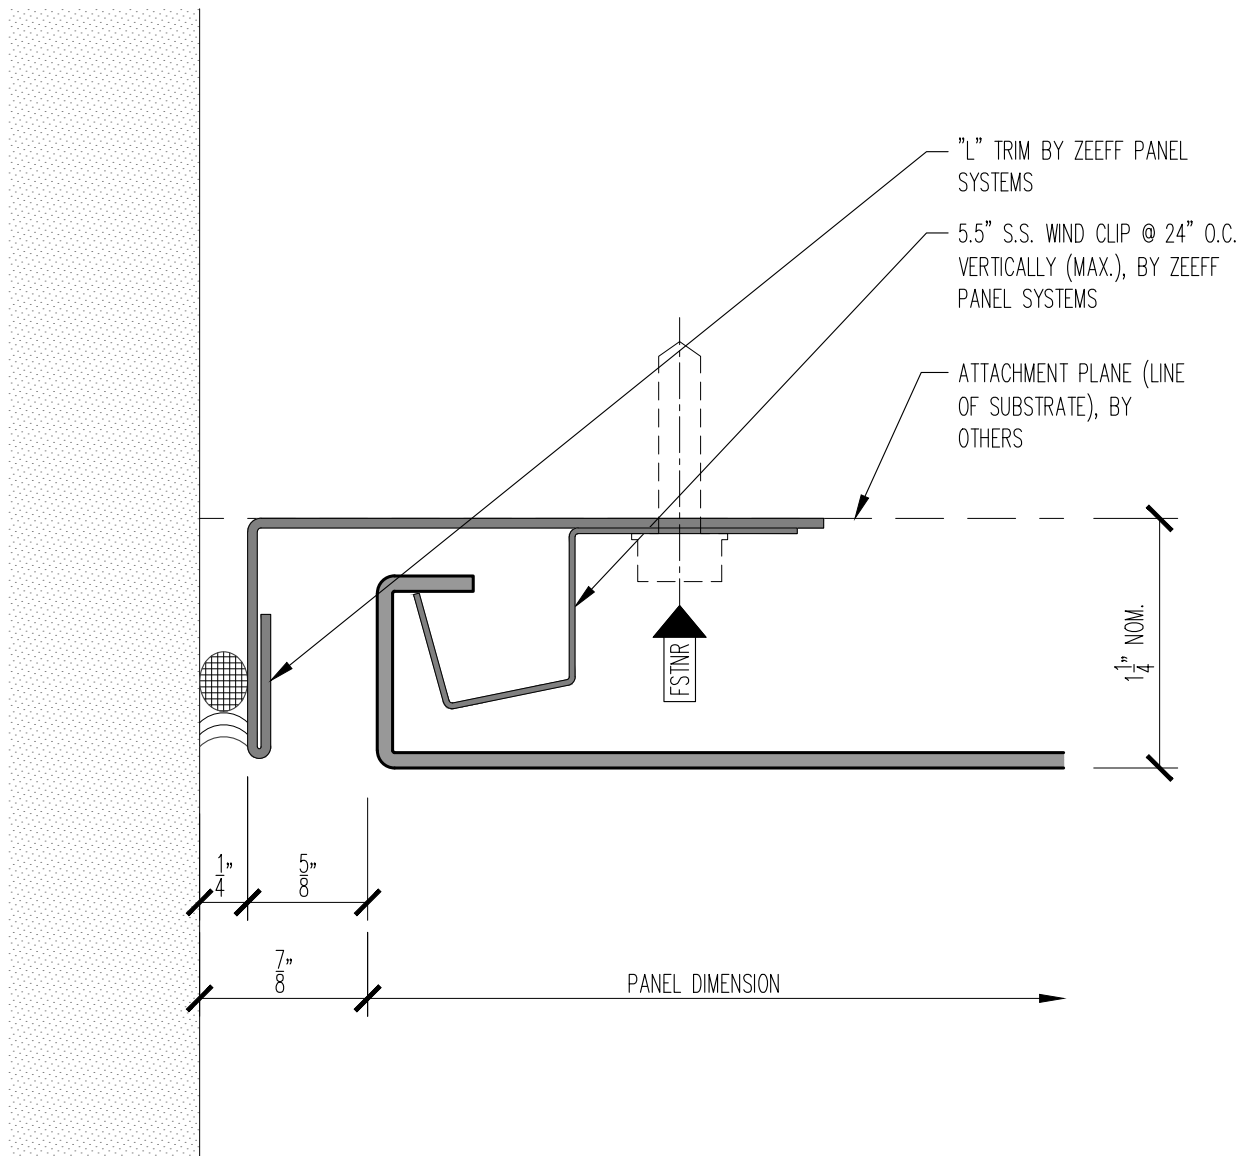

15

PANEL JAMB TERMINATION FOR PANELS OVER 48" TALL

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D18

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

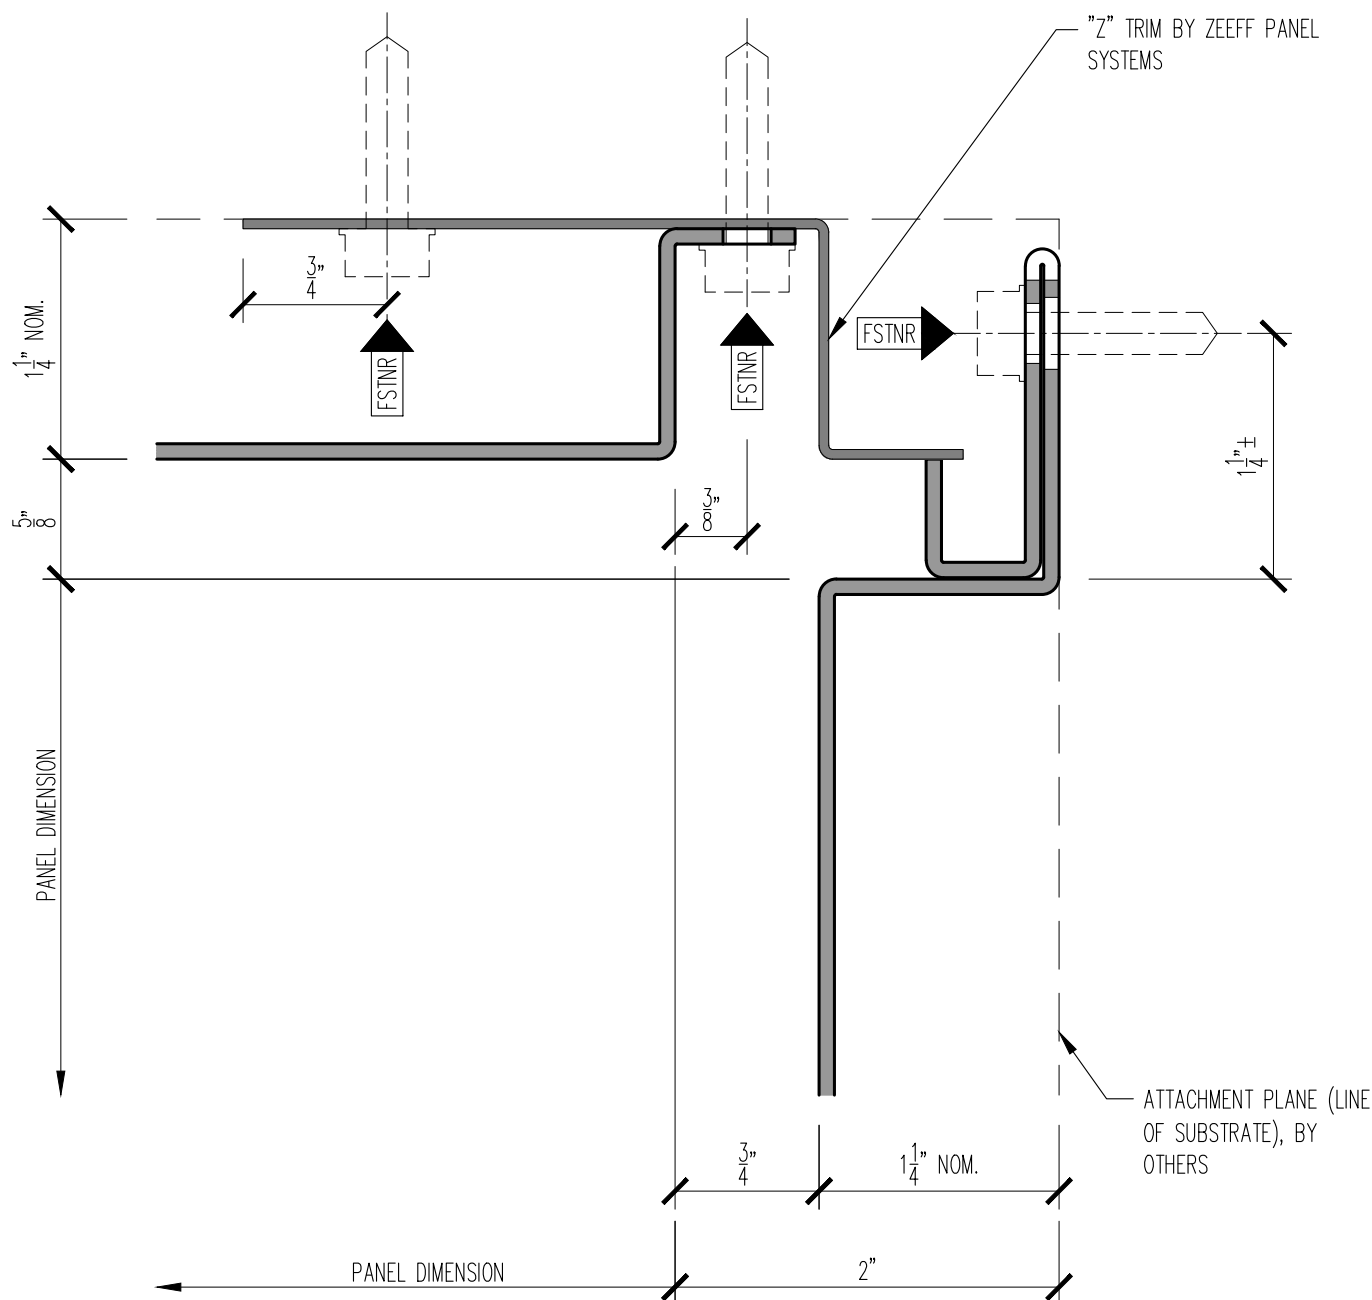

16

WALL TO SOFFIT TRANSITION

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D19

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

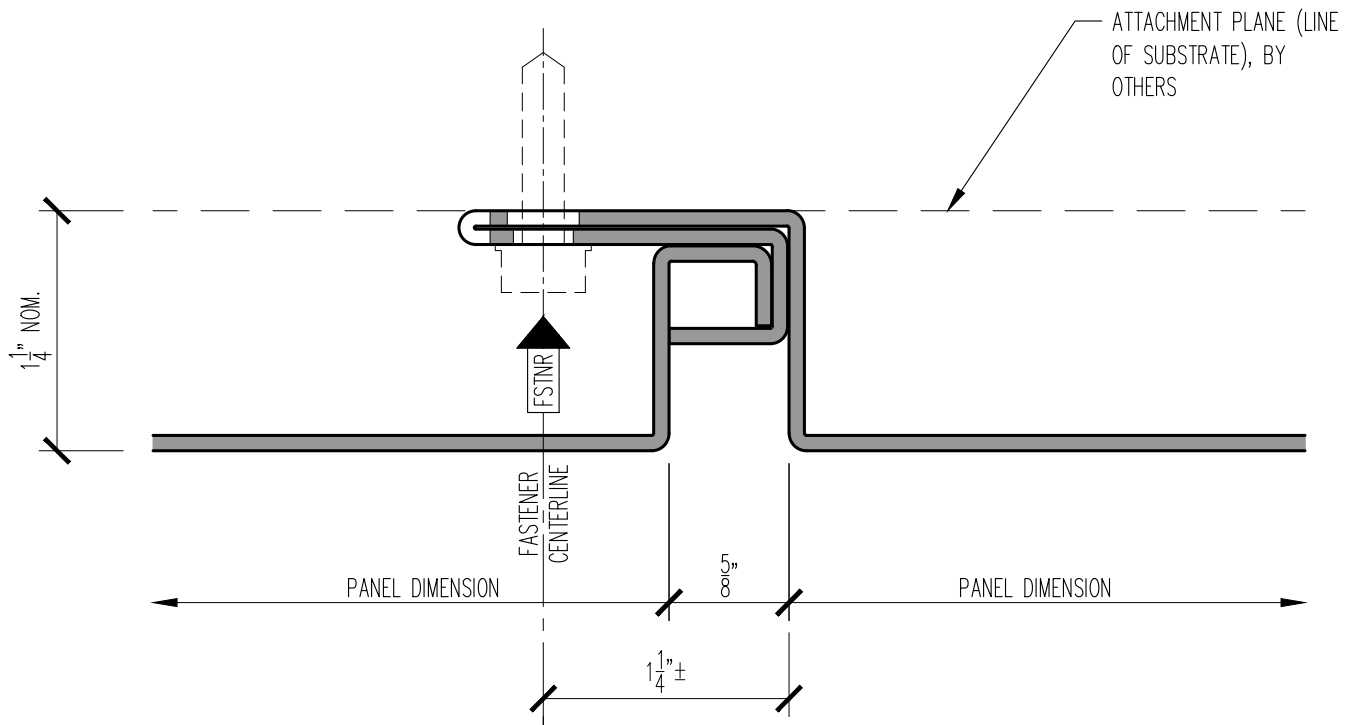

17

SOFFIT PANEL HORIZONTAL JOINT

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D20

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

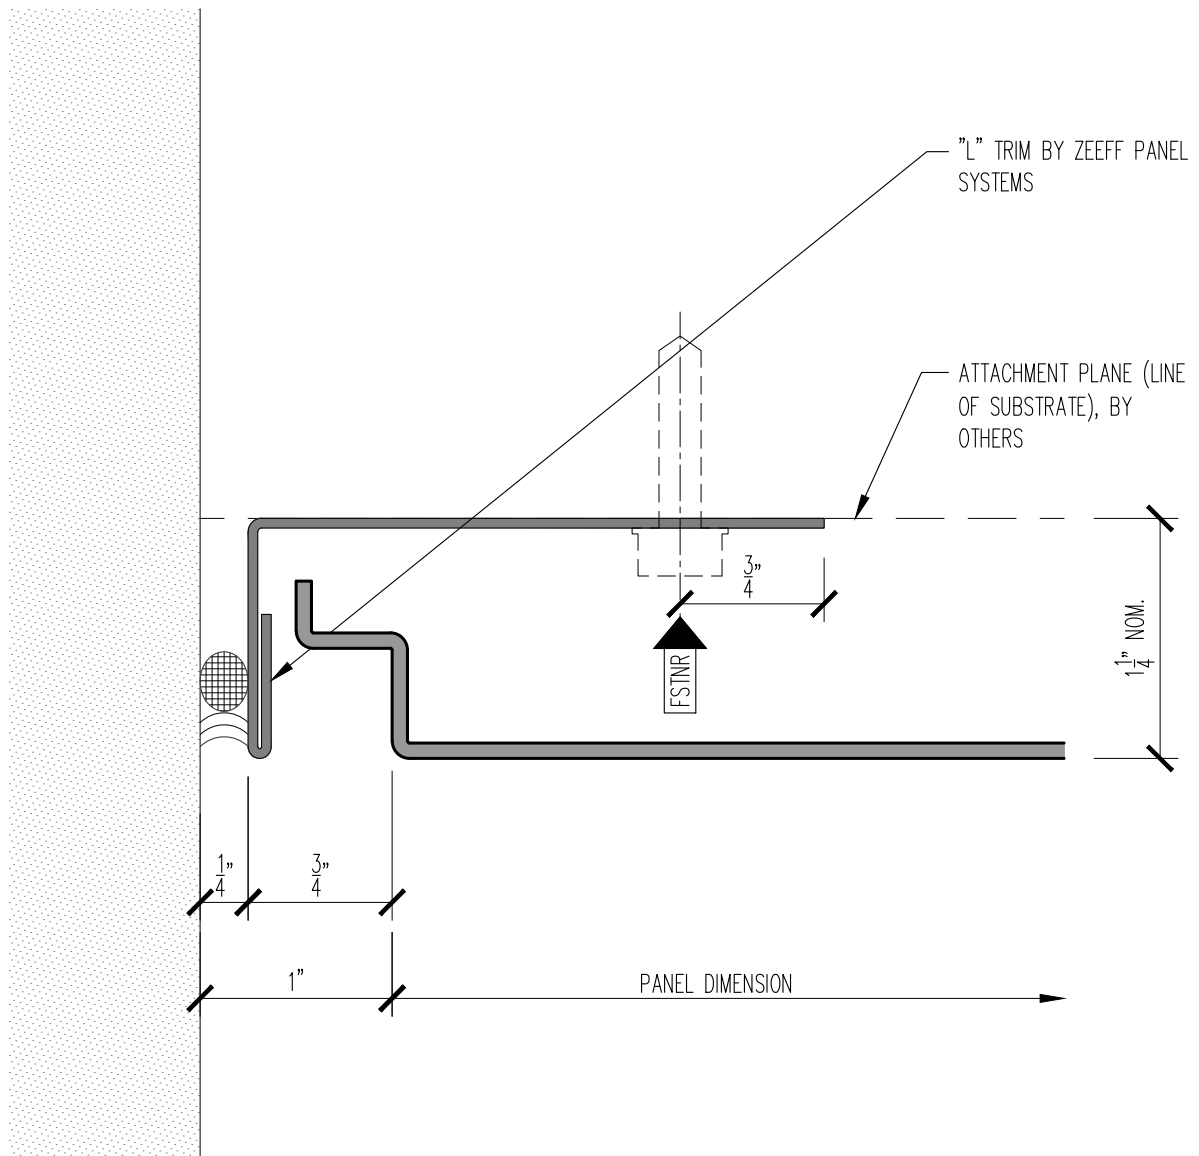

18

PANEL JAMB TERMINATION AT SOFFIT

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D21

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

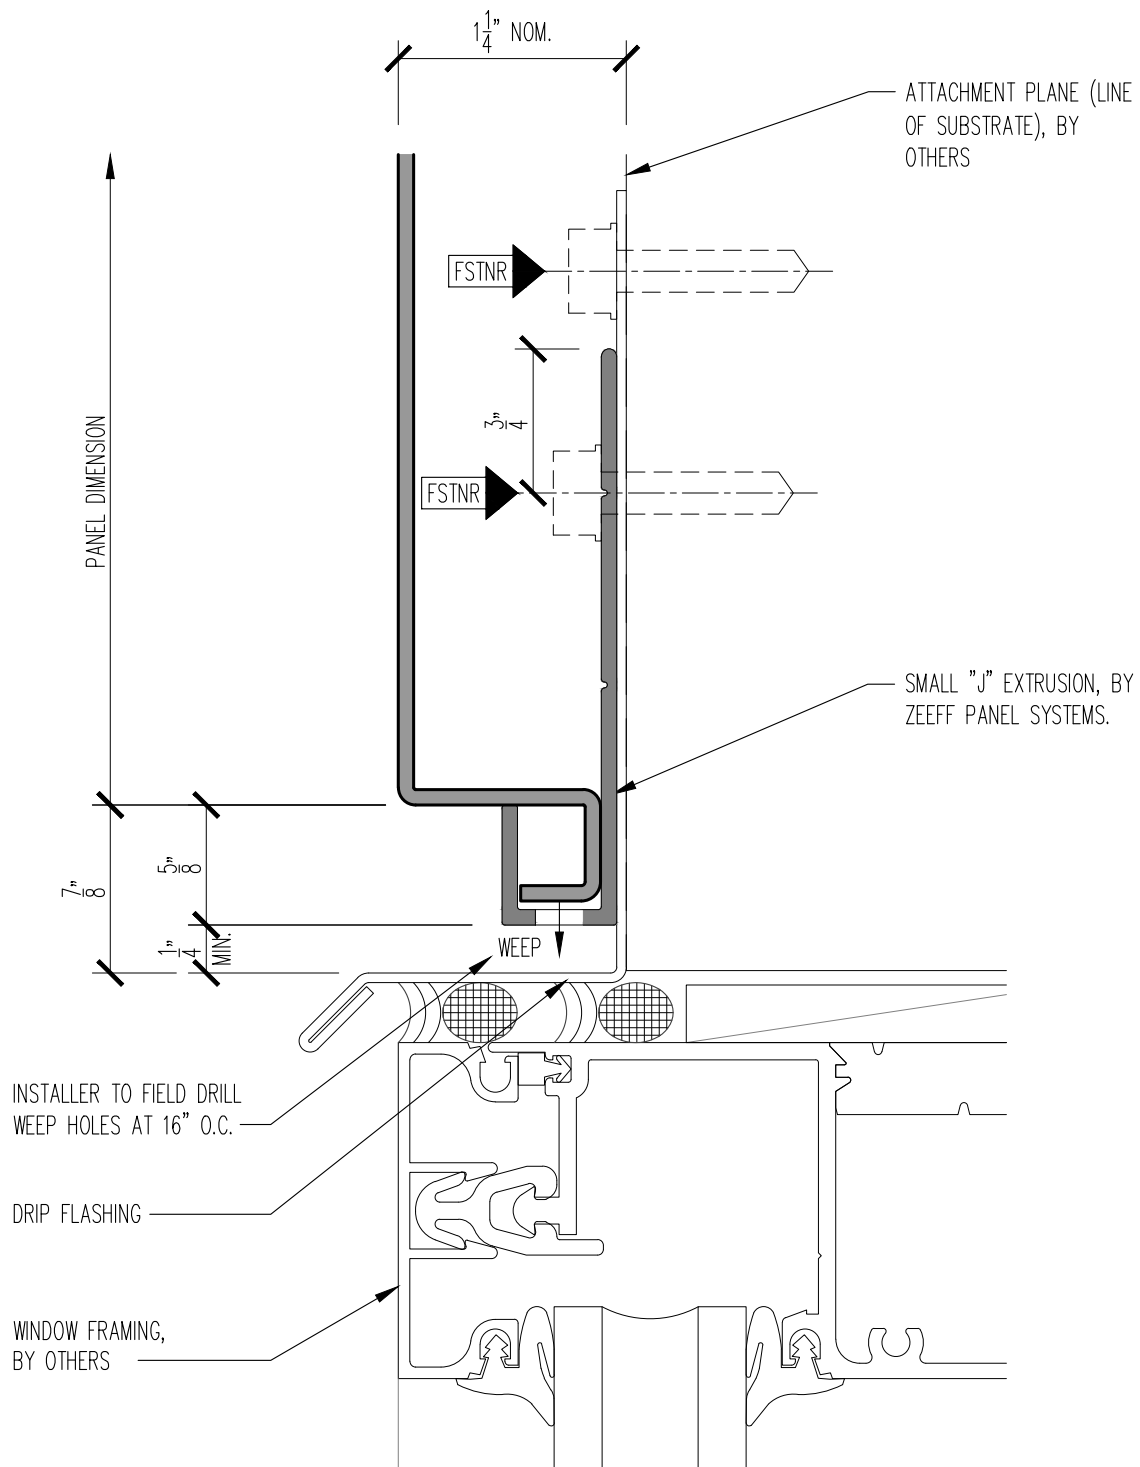

19

PANEL BASE DETAIL AT FLUSH WINDOW / DOOR HEAD

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D22

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

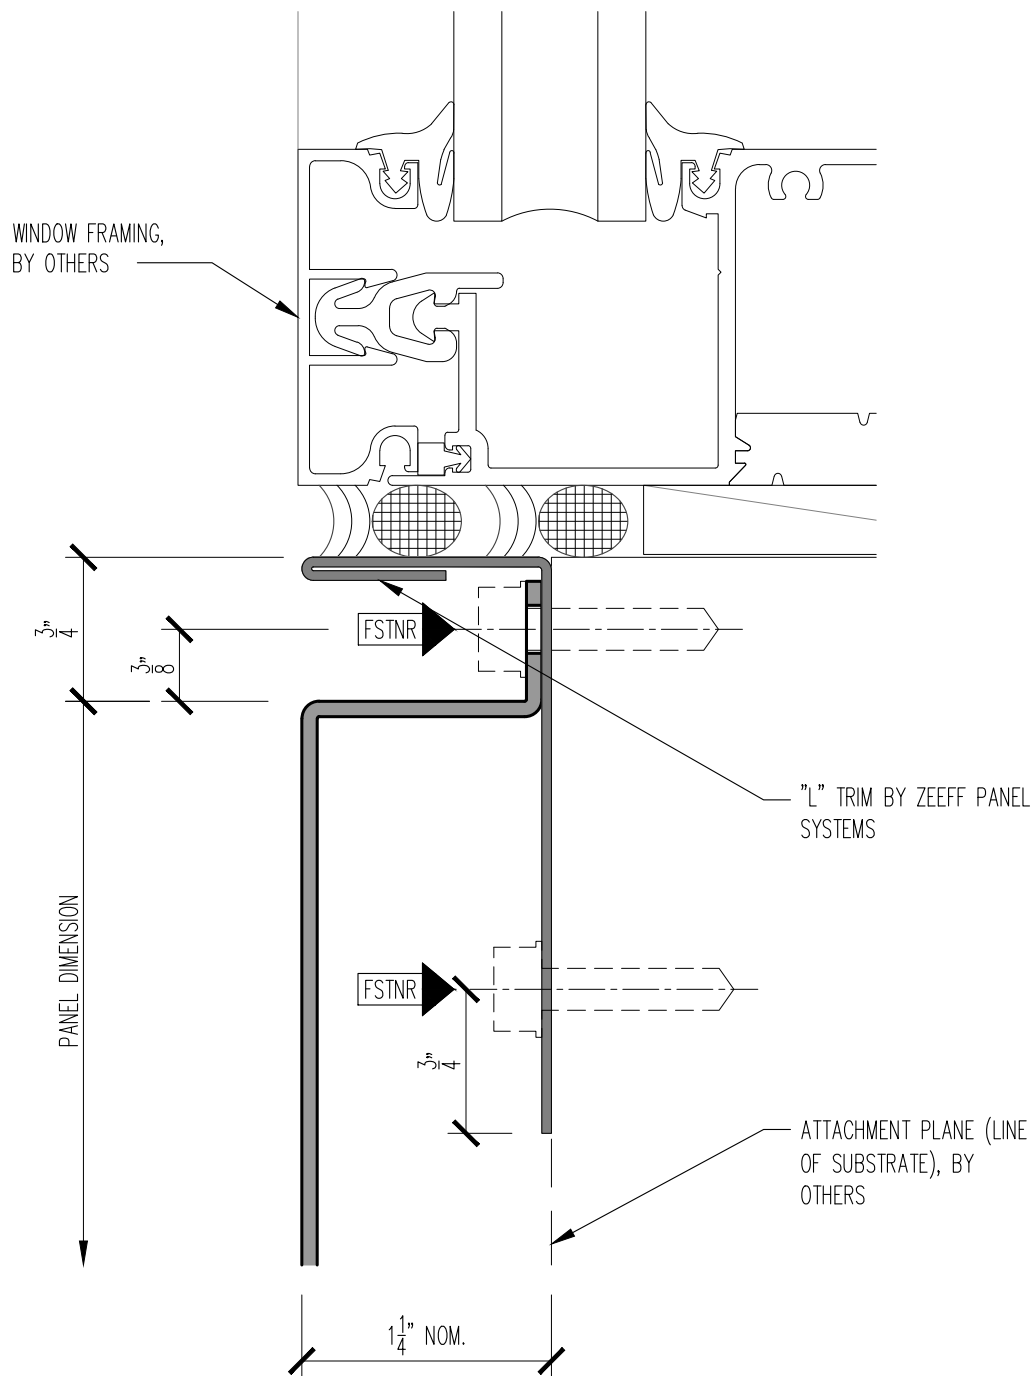

20

PANEL HEAD DETAIL AT FLUSH WINDOW SILL


SCALE: FULL

INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D23

ORIGIN SERIES DESIGN GUIDE ARCHITECTURAL INSTALLATION

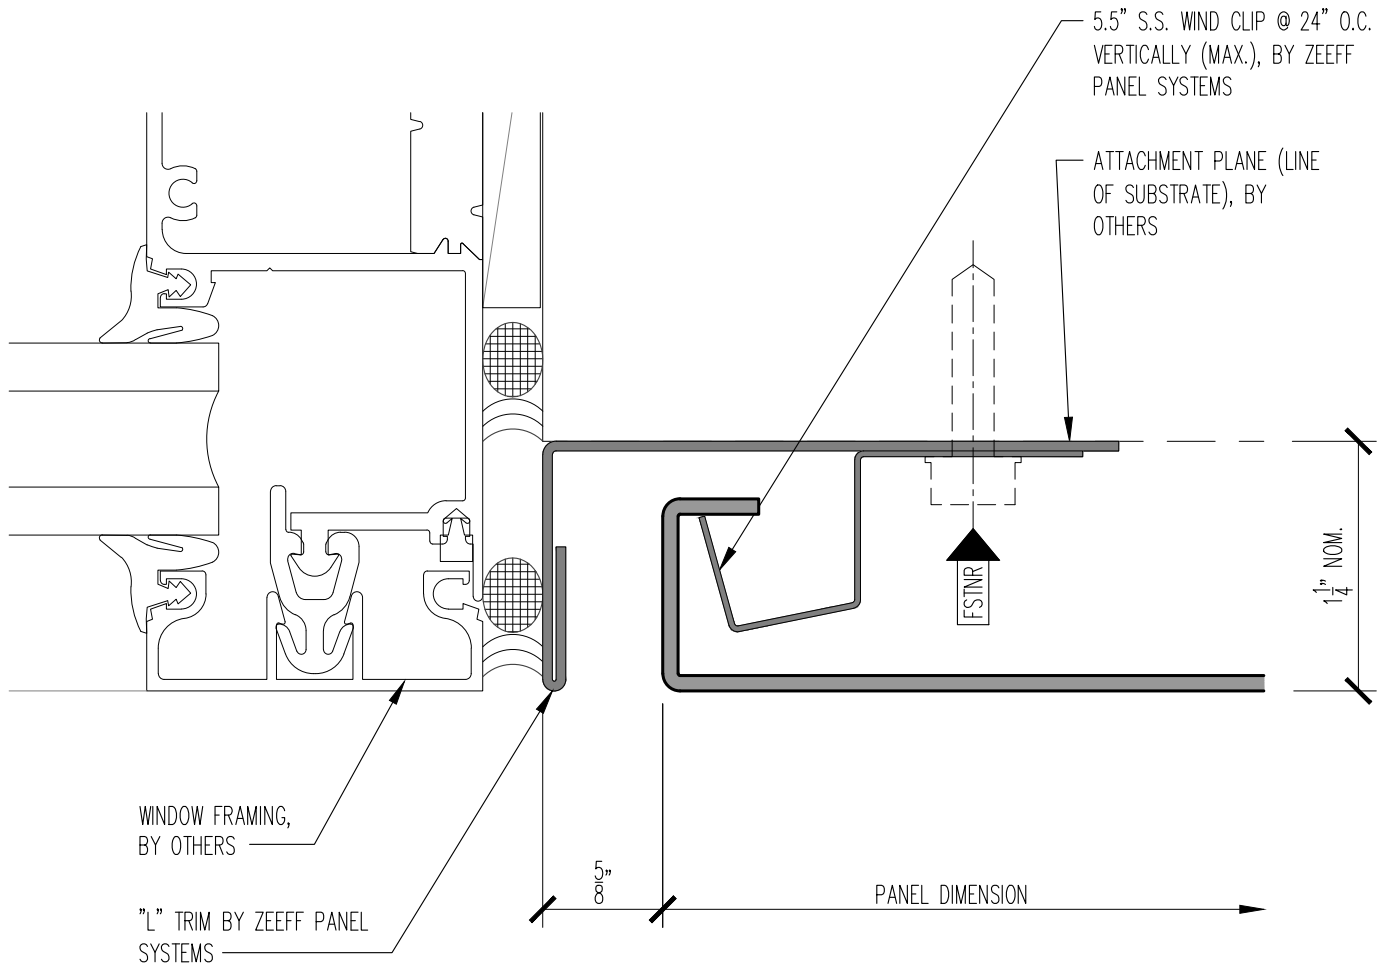

21

PANEL JAMB DETAIL AT FLUSH WINDOW / DOOR JAMB

SCALE: FULL

INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1


D24

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION



NOTE:
FORMED CORNER PANEL WIDTH "X1"
OR PANEL WIDTH "X2" MUST NOT
EXCEED 24". MINIMUM RETURN
DIMENSION IS 4".

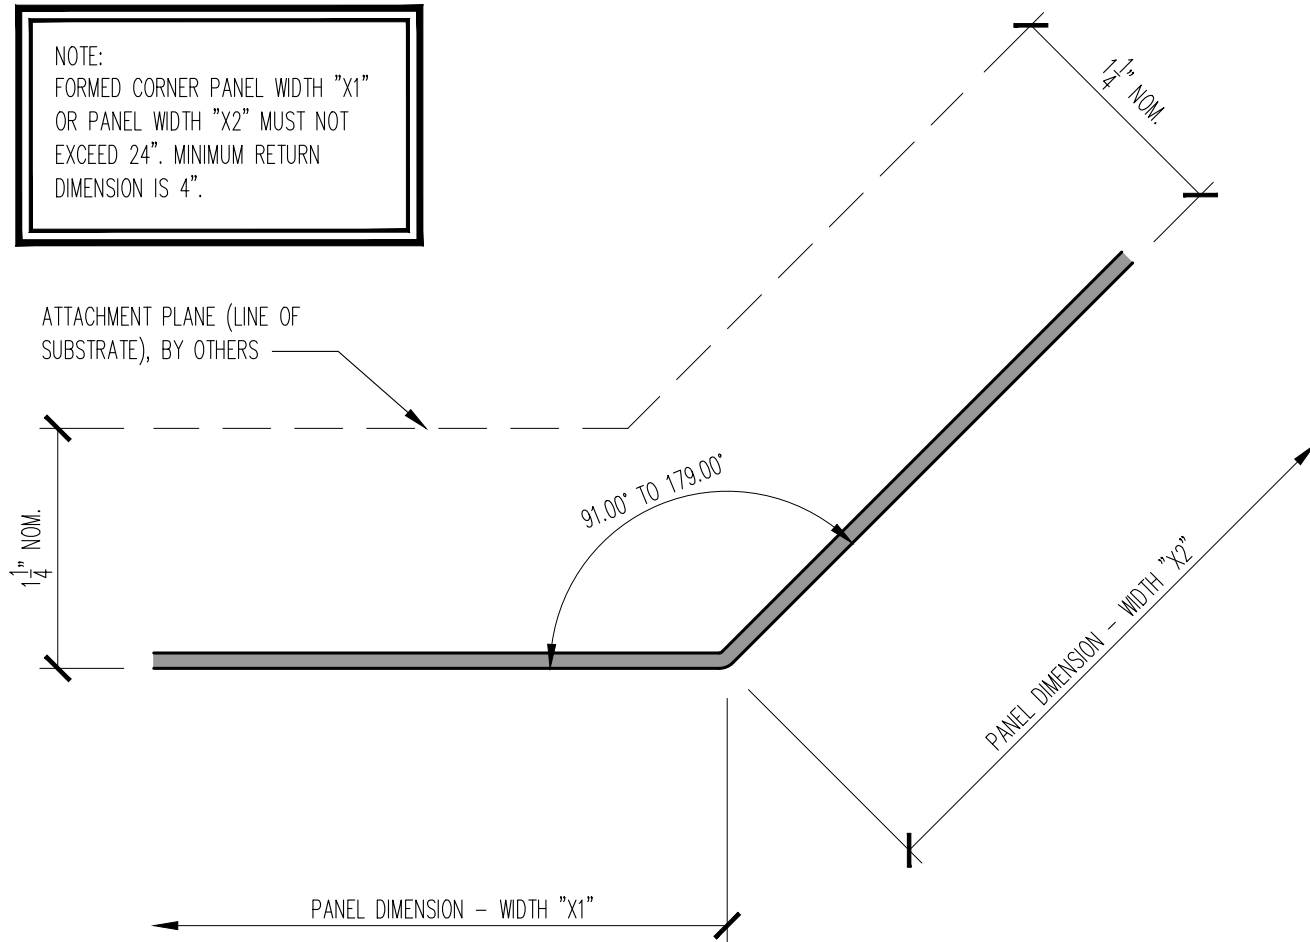

22

NON-90° FORMED OUTSIDE CORNER DETAIL

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D25

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

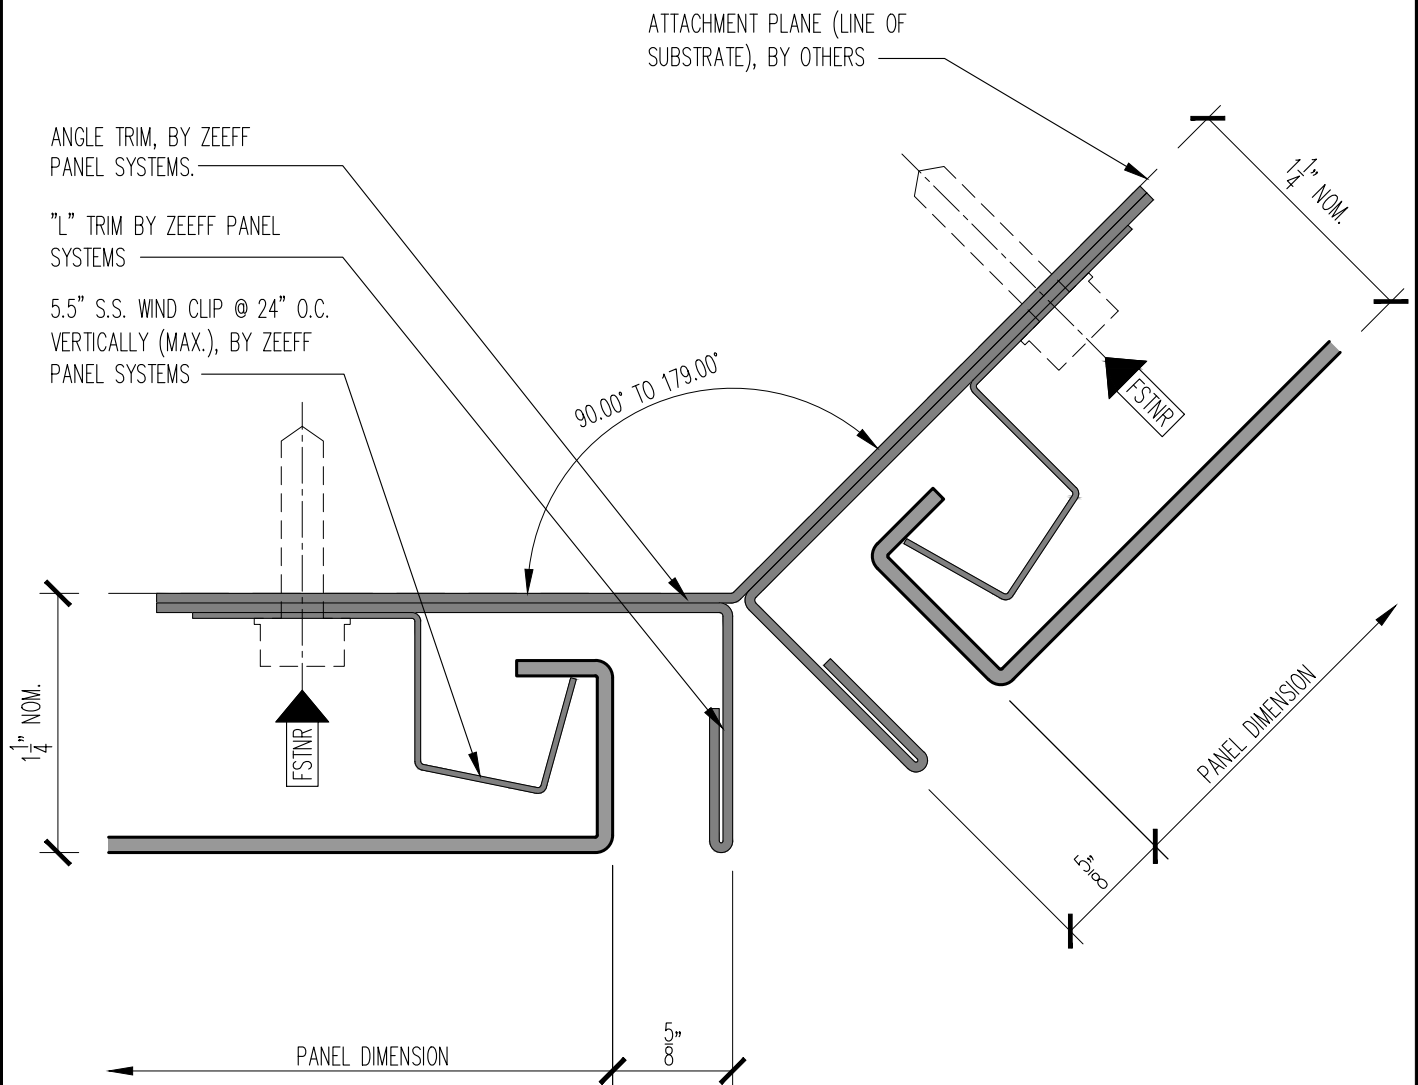

22A

3-PC TRIM OUTSIDE CORNER DETAIL

SCALE: FULL


INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D26

ORIGIN SERIES DESIGN GUIDE

ARCHITECTURAL INSTALLATION

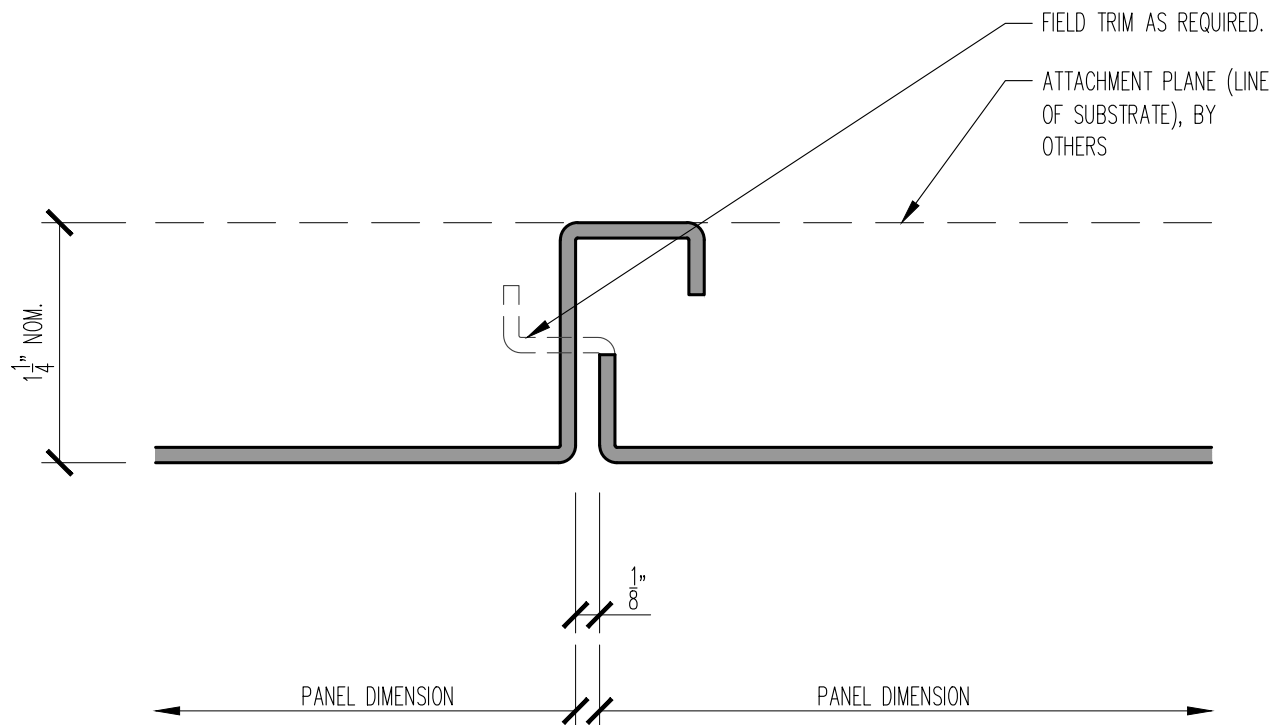

23

1/8" VERTICAL PANEL JOINT FOR SPECIAL CONDITIONS

SCALE: FULL

INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D27