


# LITE SERIES DESIGN GUIDE

## CUT-TO-FIT INSTALLATION

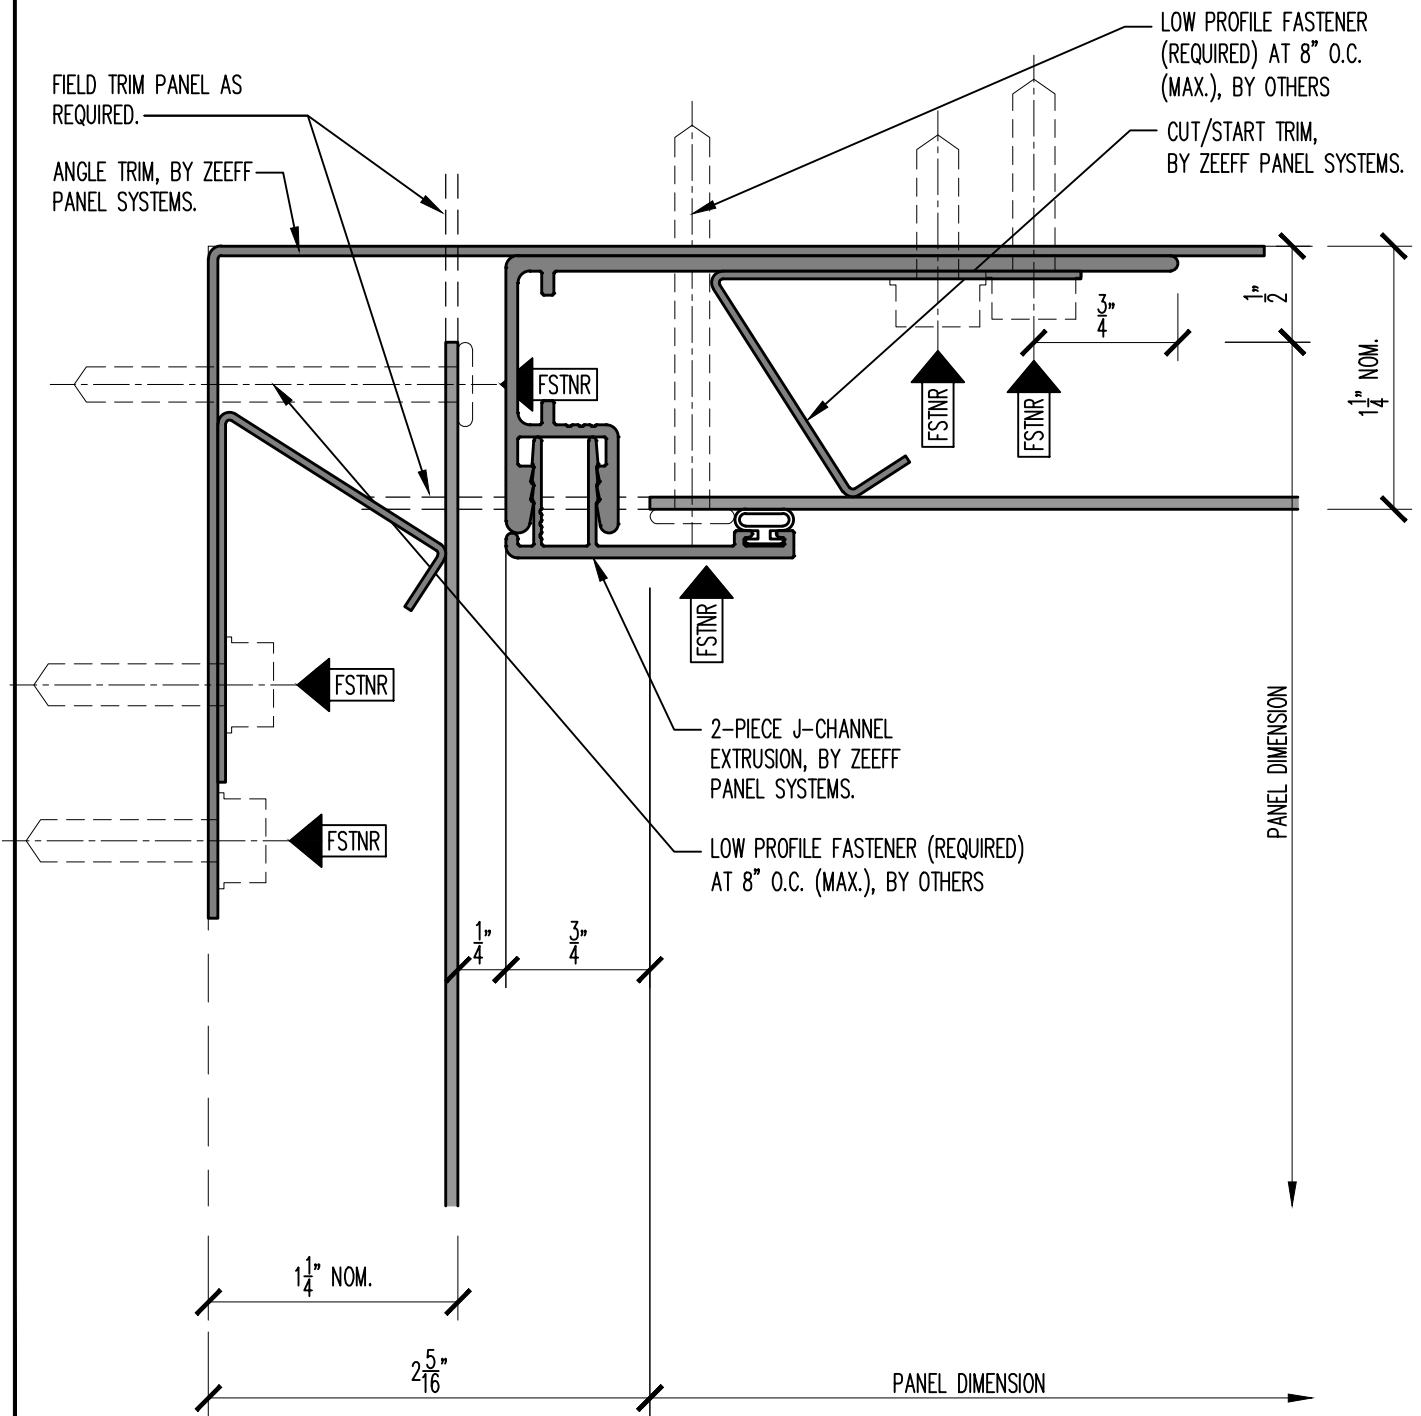

14

### WALL TO SOFFIT TRANSITION

SCALE: FULL