


ORIGIN SERIES DESIGN GUIDE

CUT-TO-FIT INSTALLATION

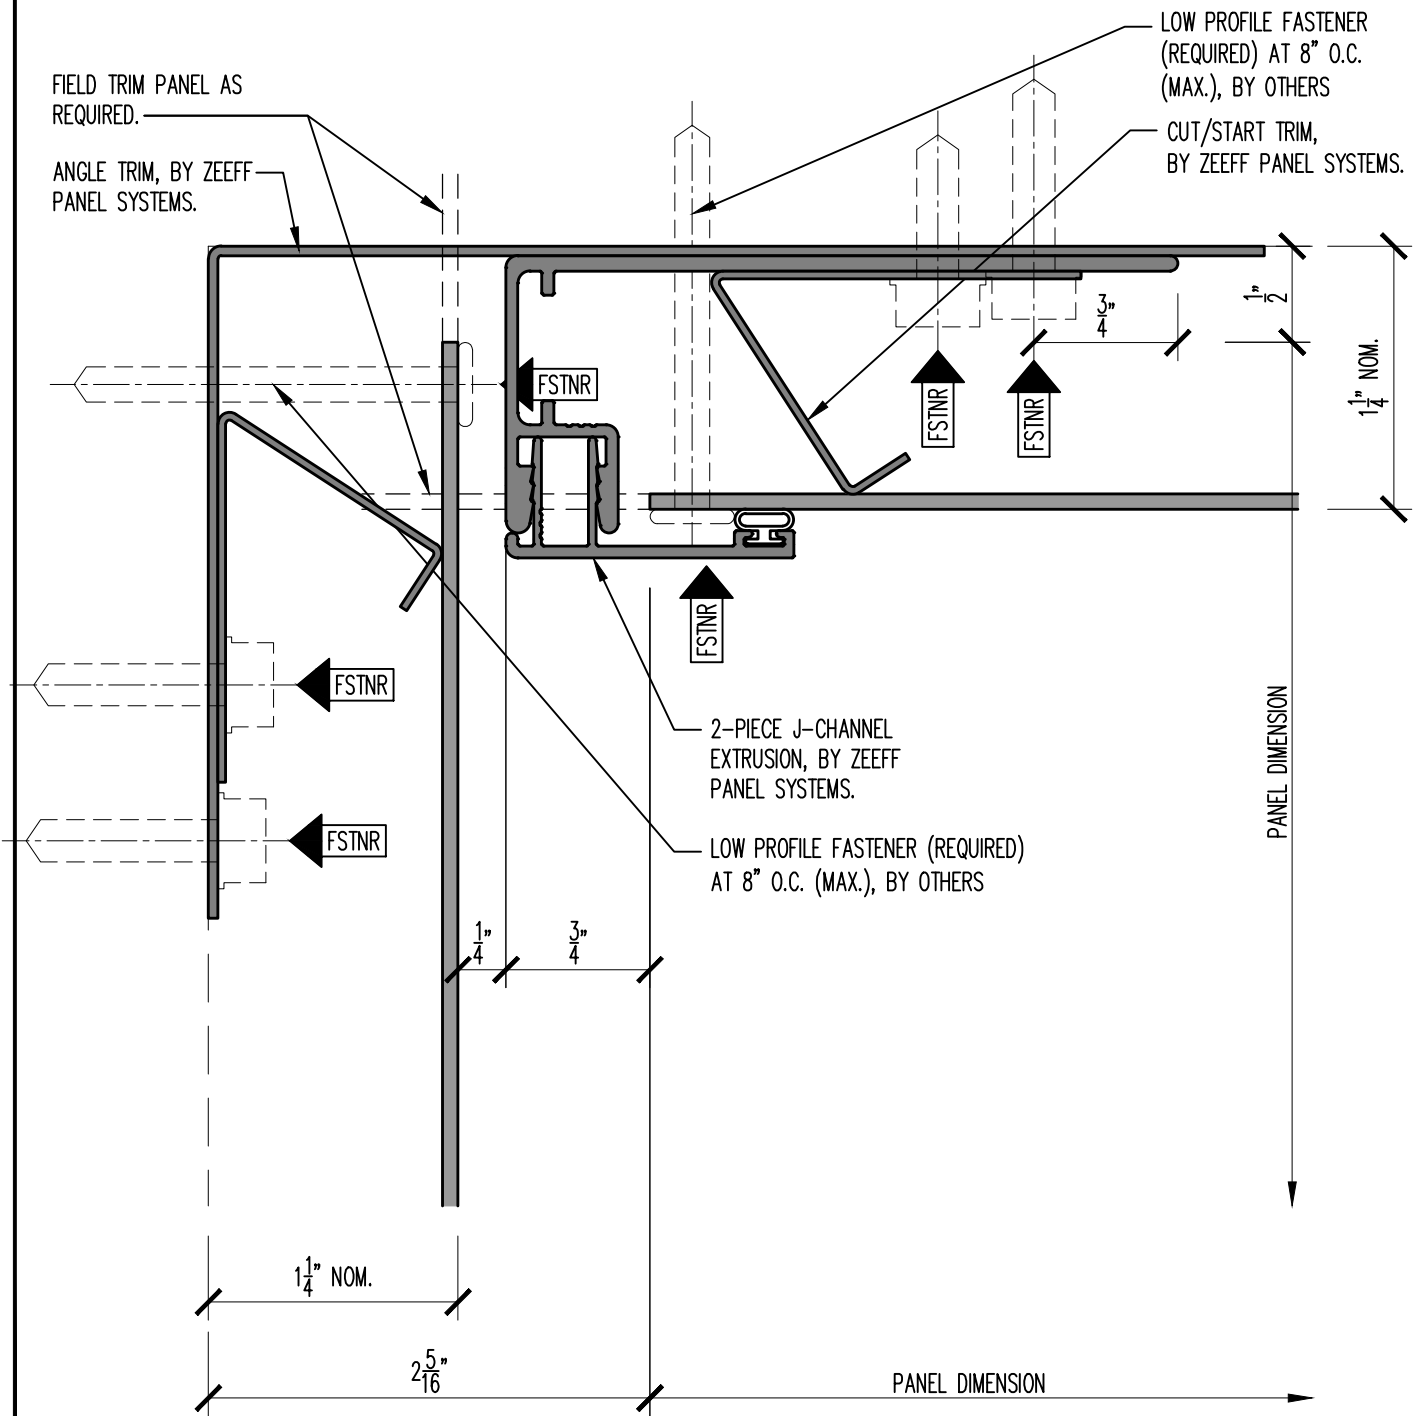

16

WALL TO SOFFIT TRANSITION

SCALE: FULL