


# ORIGIN SERIES DESIGN GUIDE

## FORMED TRIM INSTALLATION

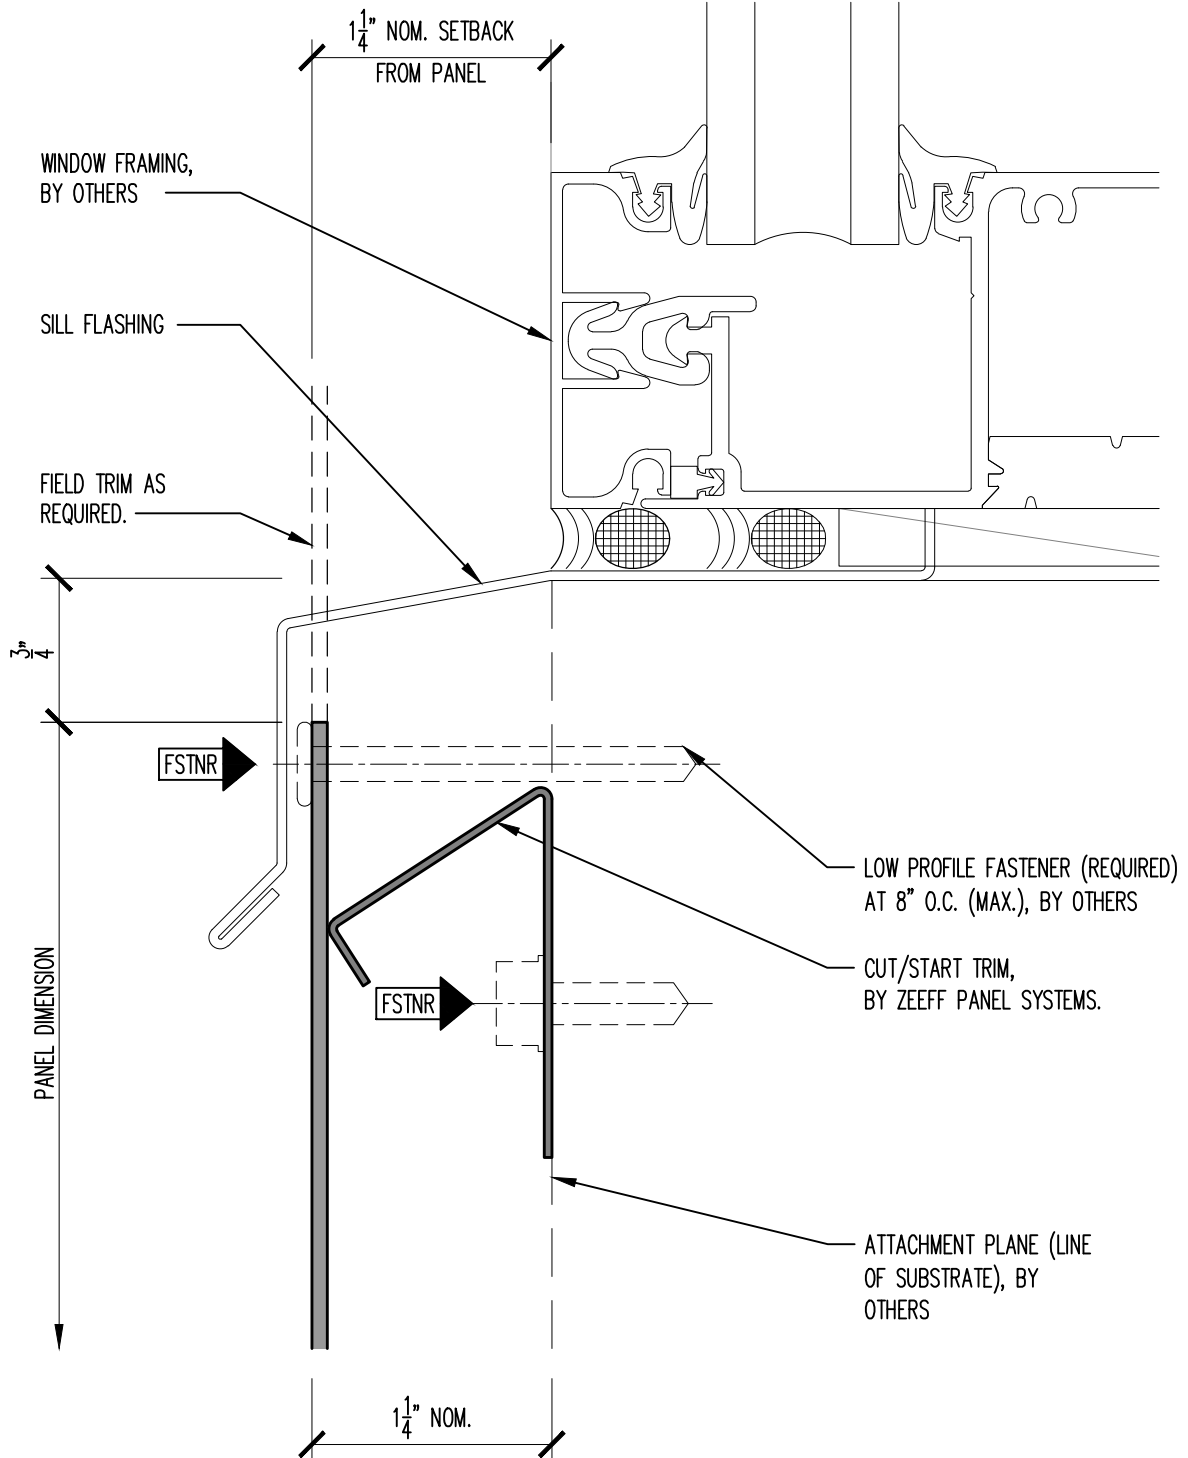

10

### PANEL HEAD DETAIL AT WINDOW SILL

SCALE: FULL