


ORIGIN SERIES DESIGN GUIDE

FORMED TRIM INSTALLATION

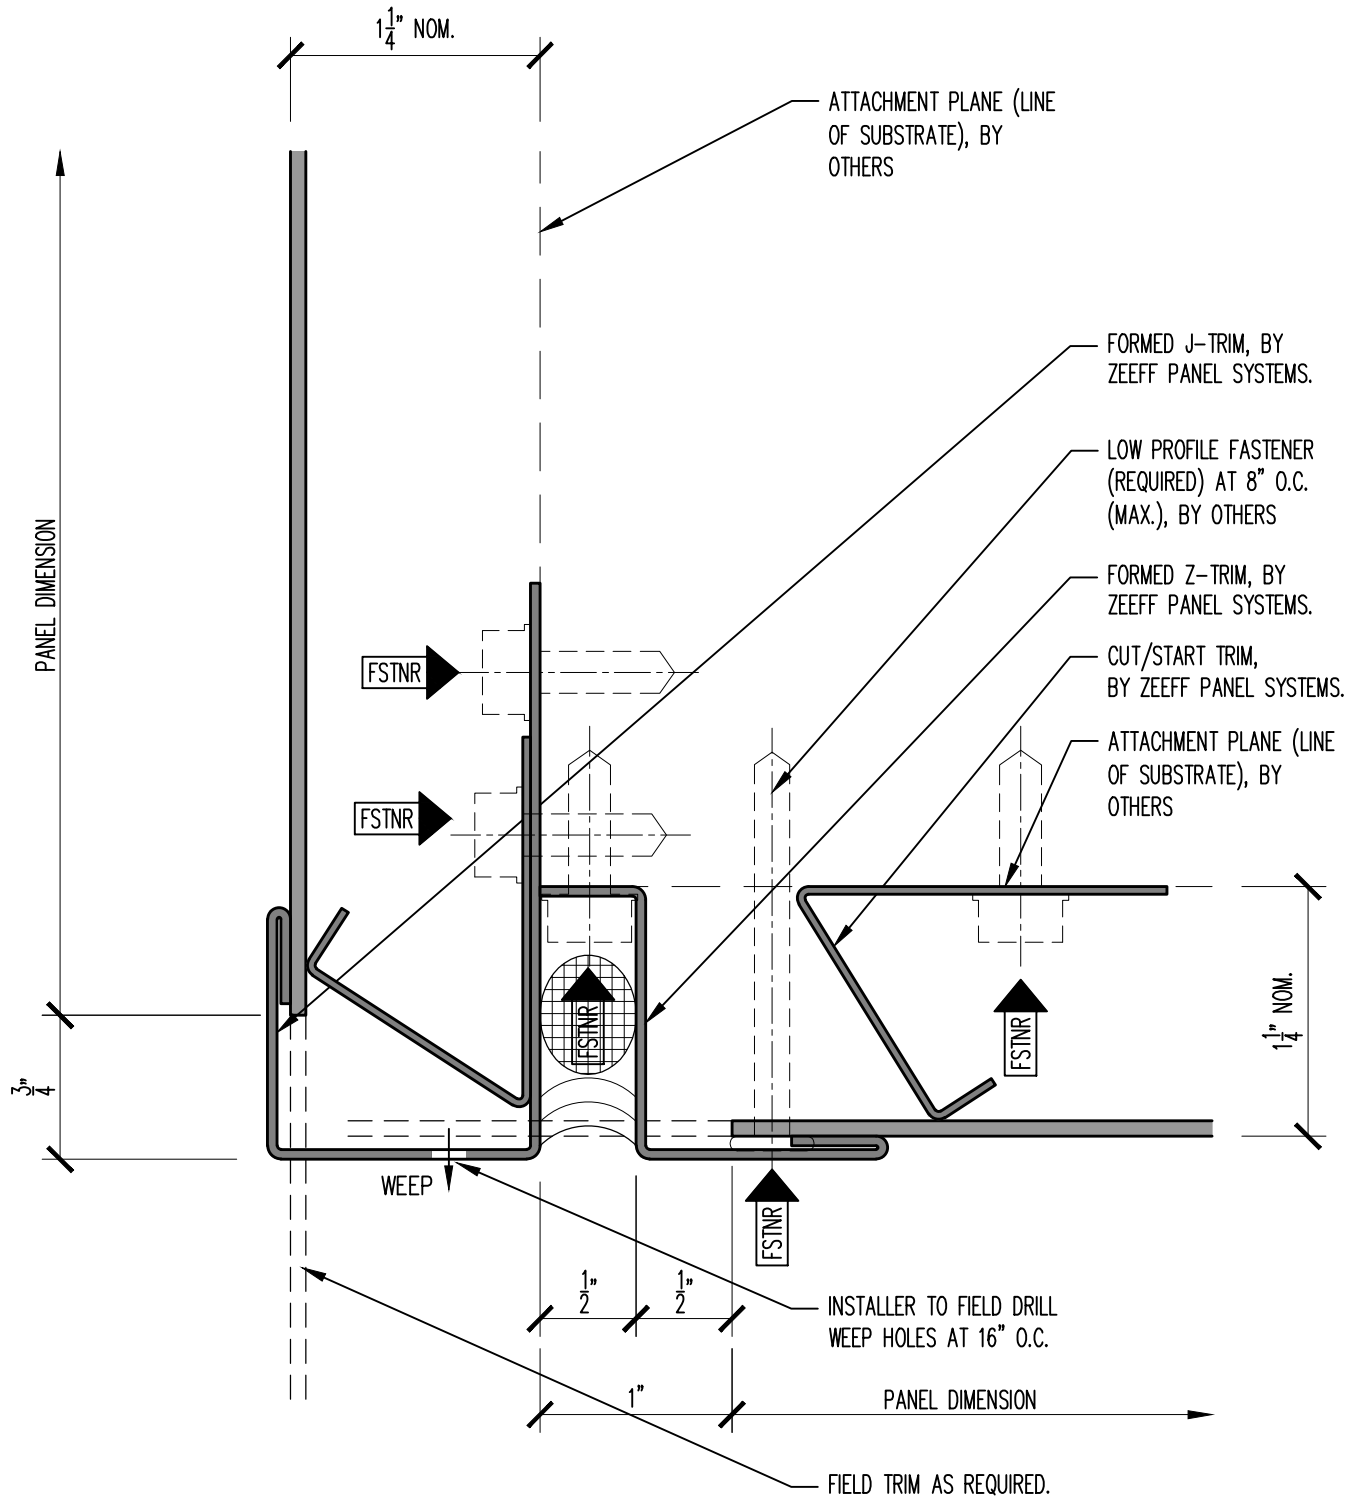

13

FASCIA TO SOFFIT TRANSITION

SCALE: FULL