


ORIGIN SERIES DESIGN GUIDE

FORMED TRIM INSTALLATION



FIELD TRIM AS REQUIRED.

ANGLE TRIM, BY ZEEFF
PANEL SYSTEMS.

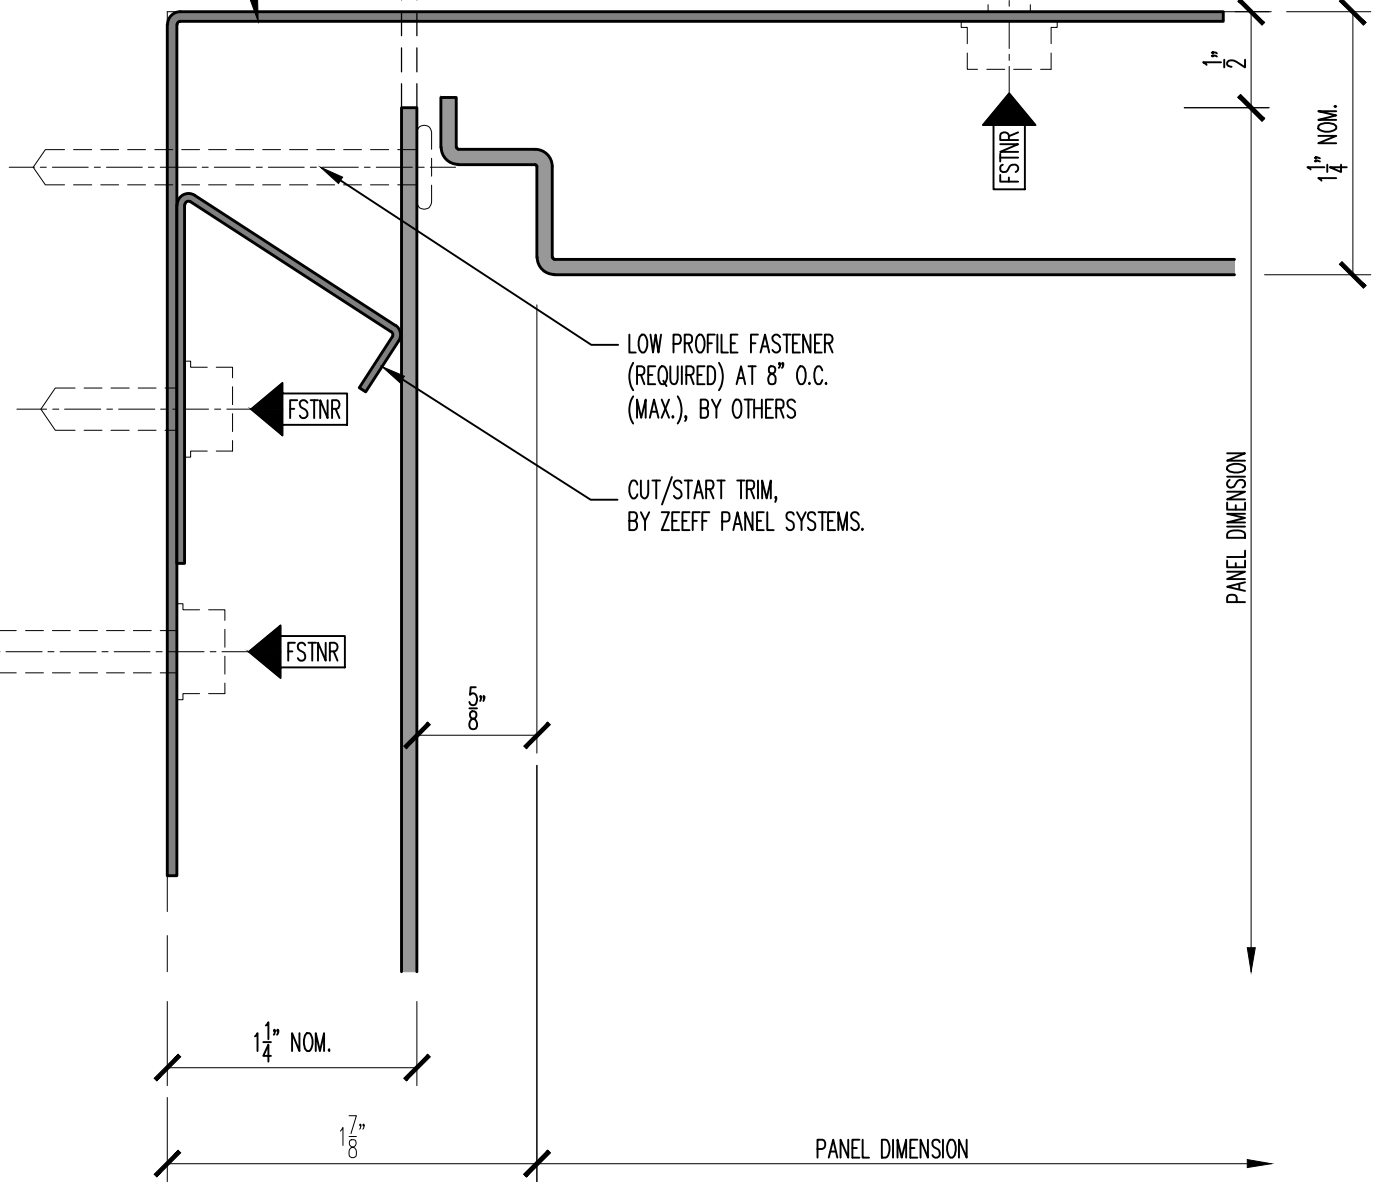

16

WALL TO SOFFIT TRANSITION

SCALE: FULL

INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D16